

How to disable the battery saver?

**BLACKVIEW** 

DokeOS

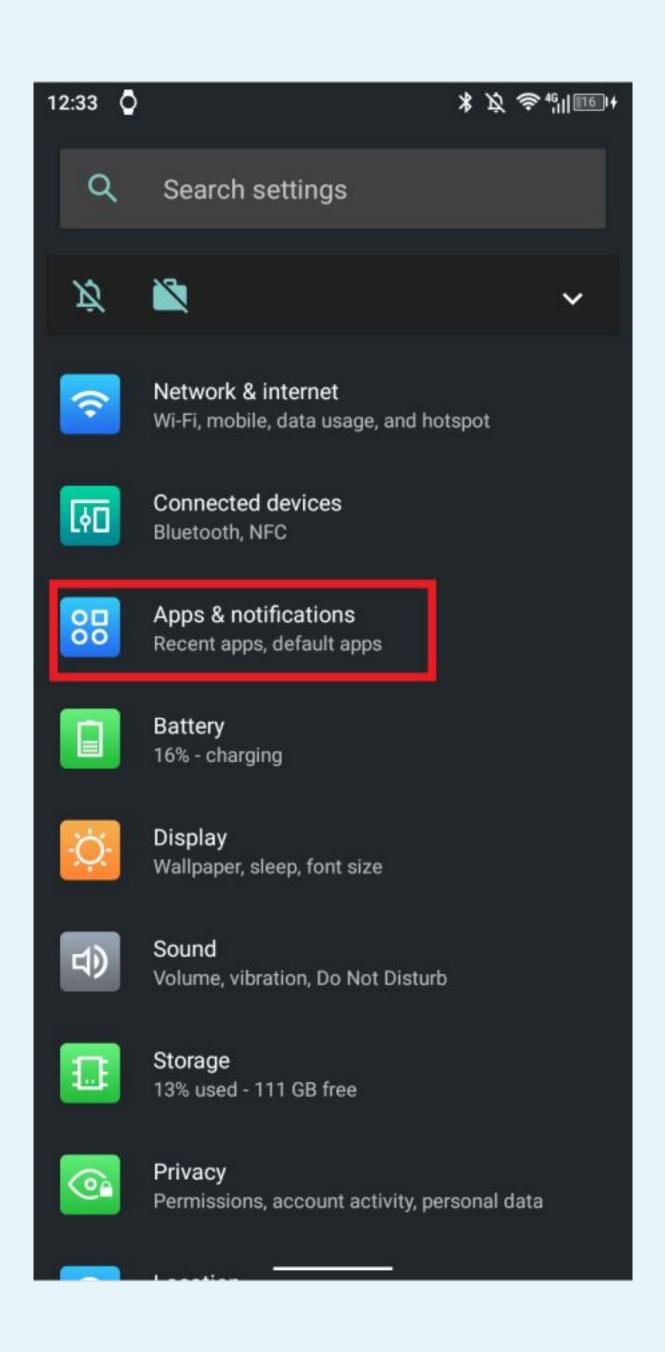


In the phone settings, tap on Apps & notifications
Then, select the Your App app

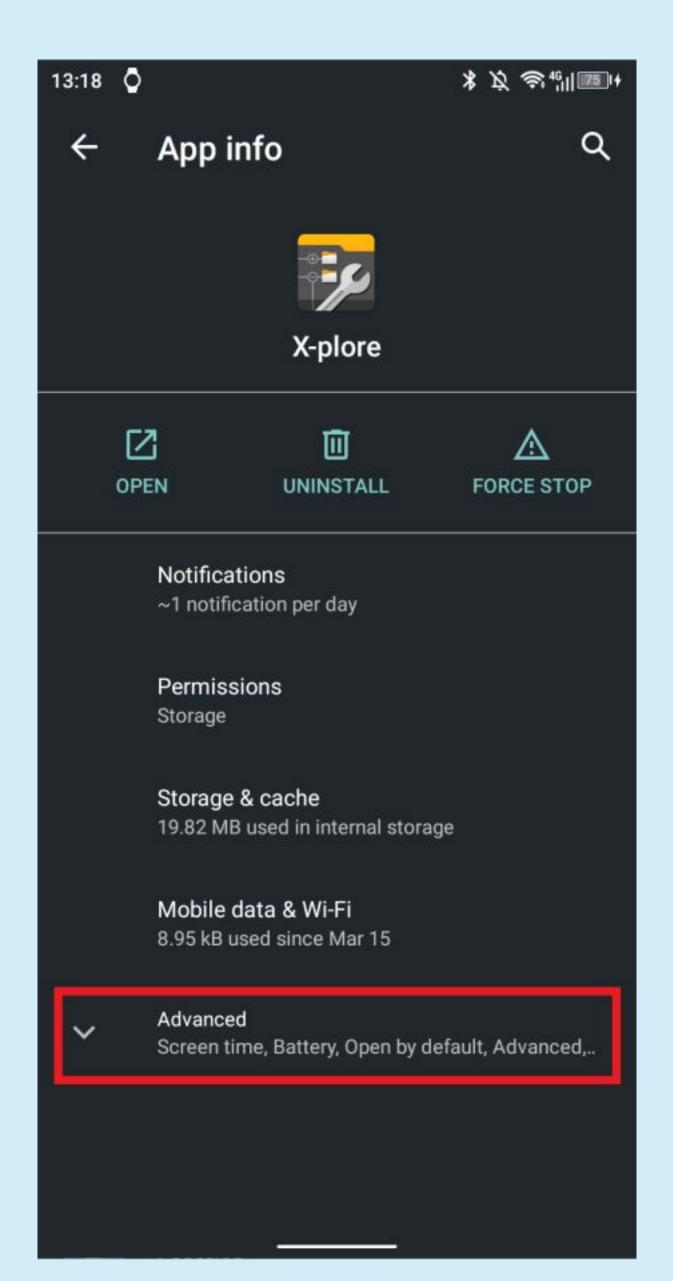




Select Advanced

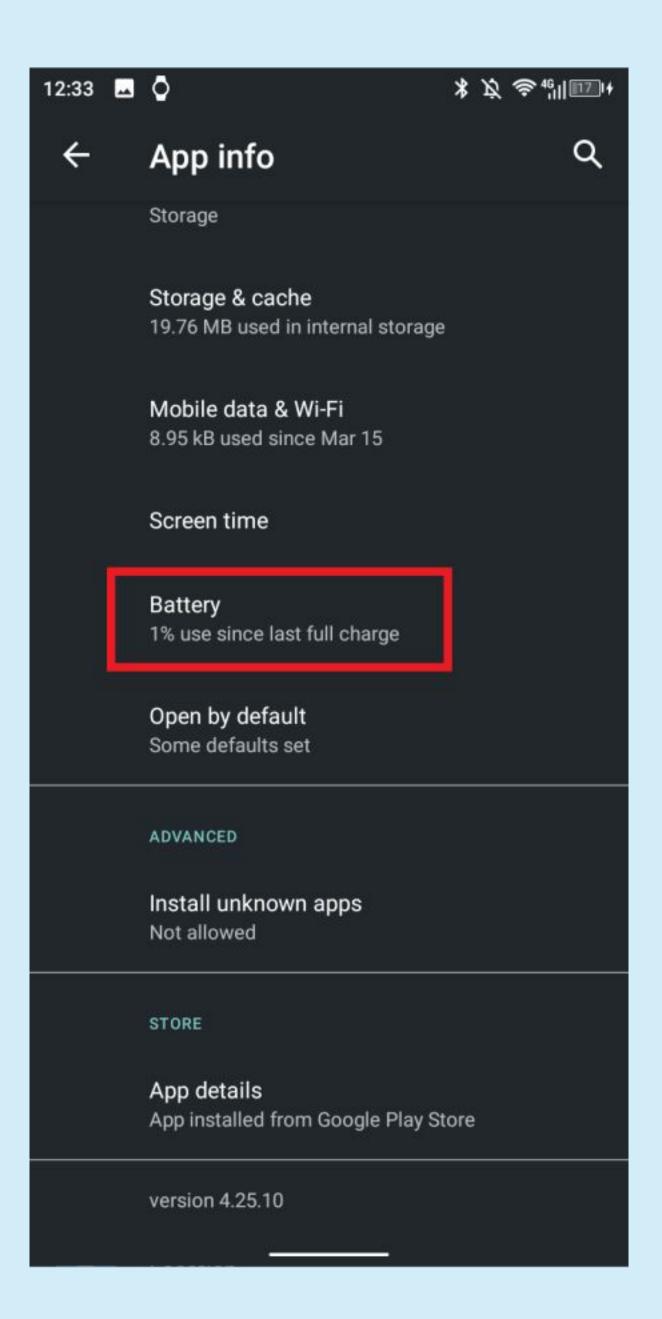




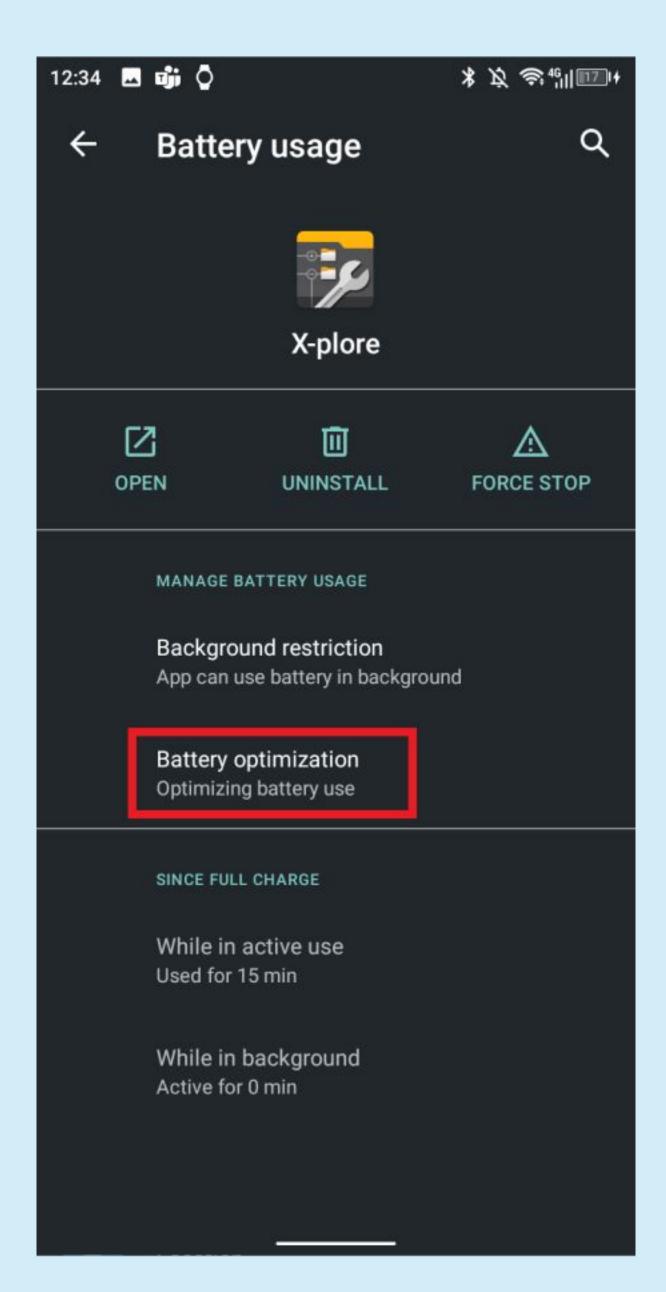




Select Battery optimization

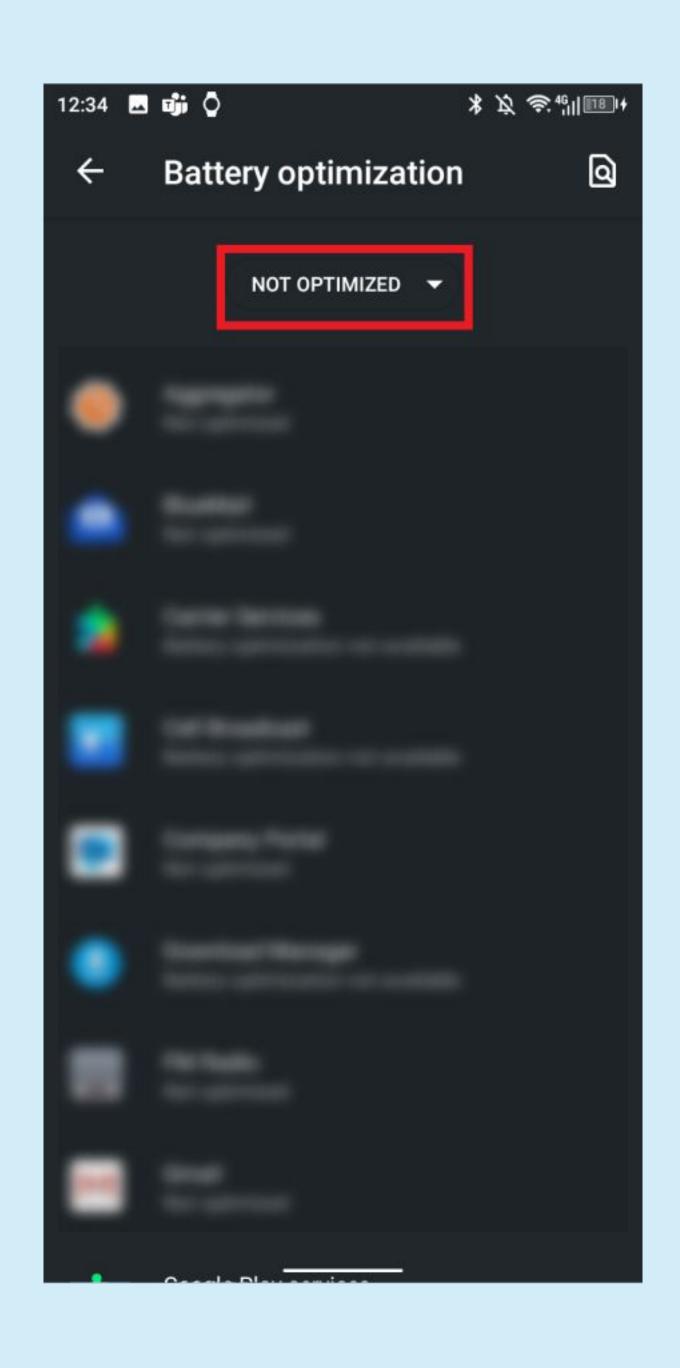





And select Your App

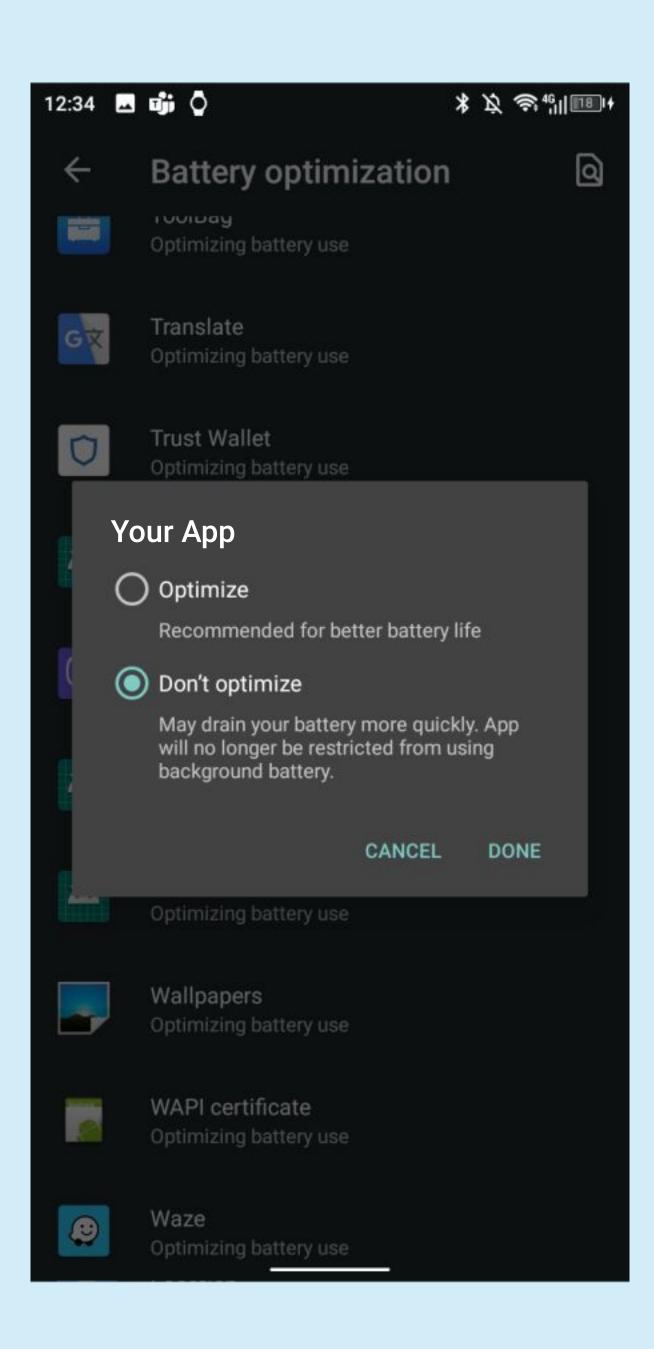




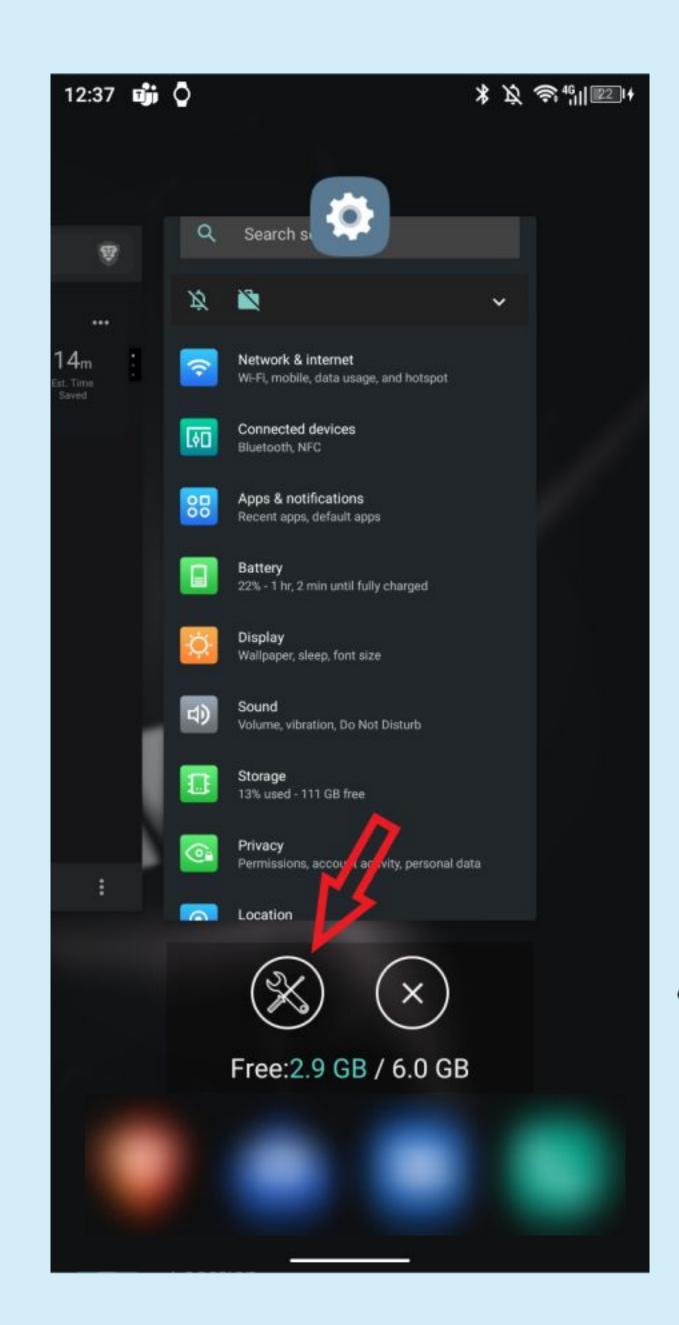




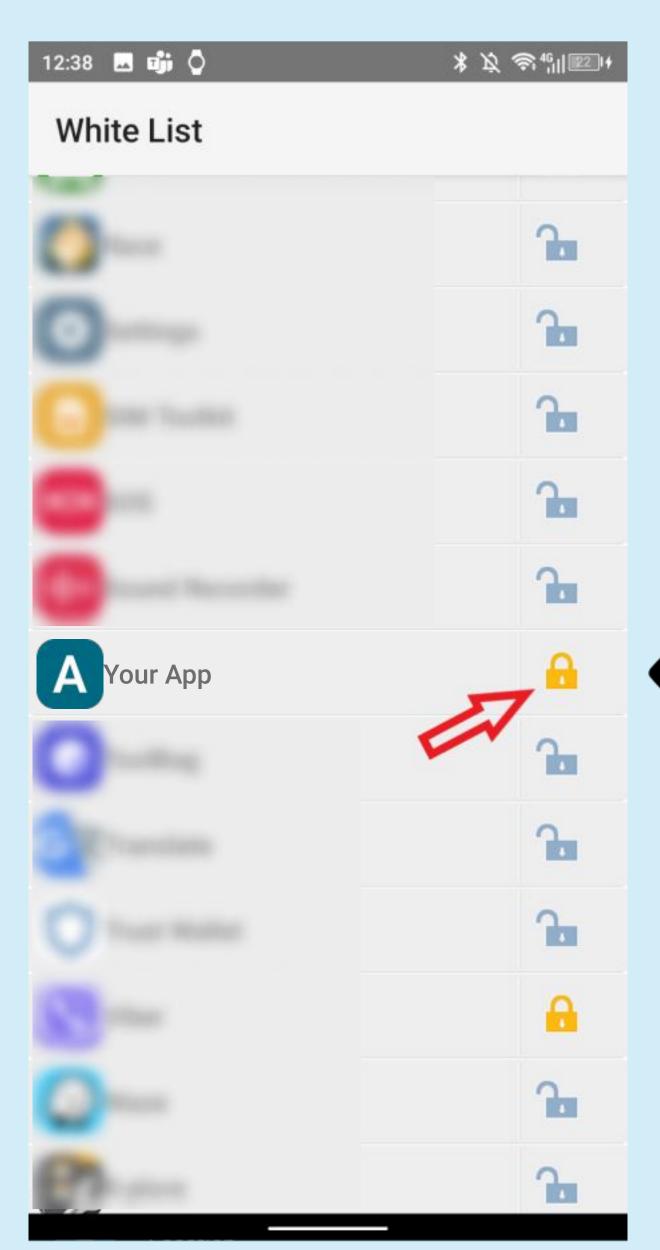


Lock Your App in the White List

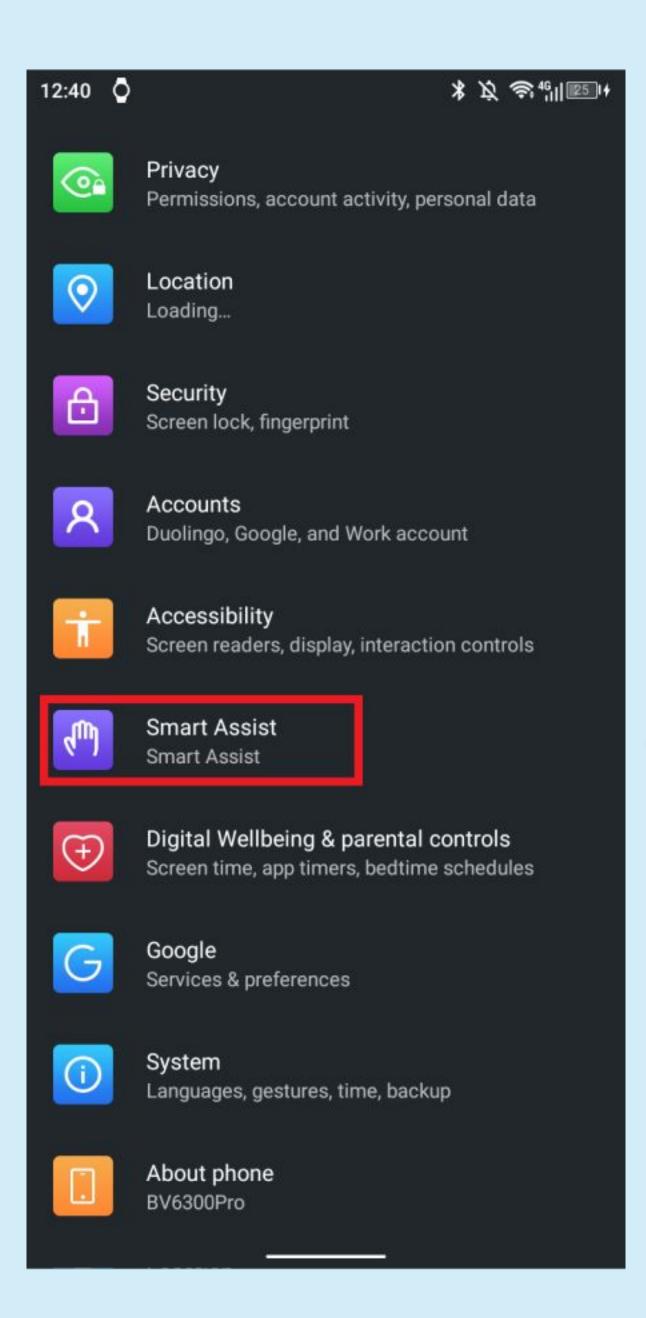



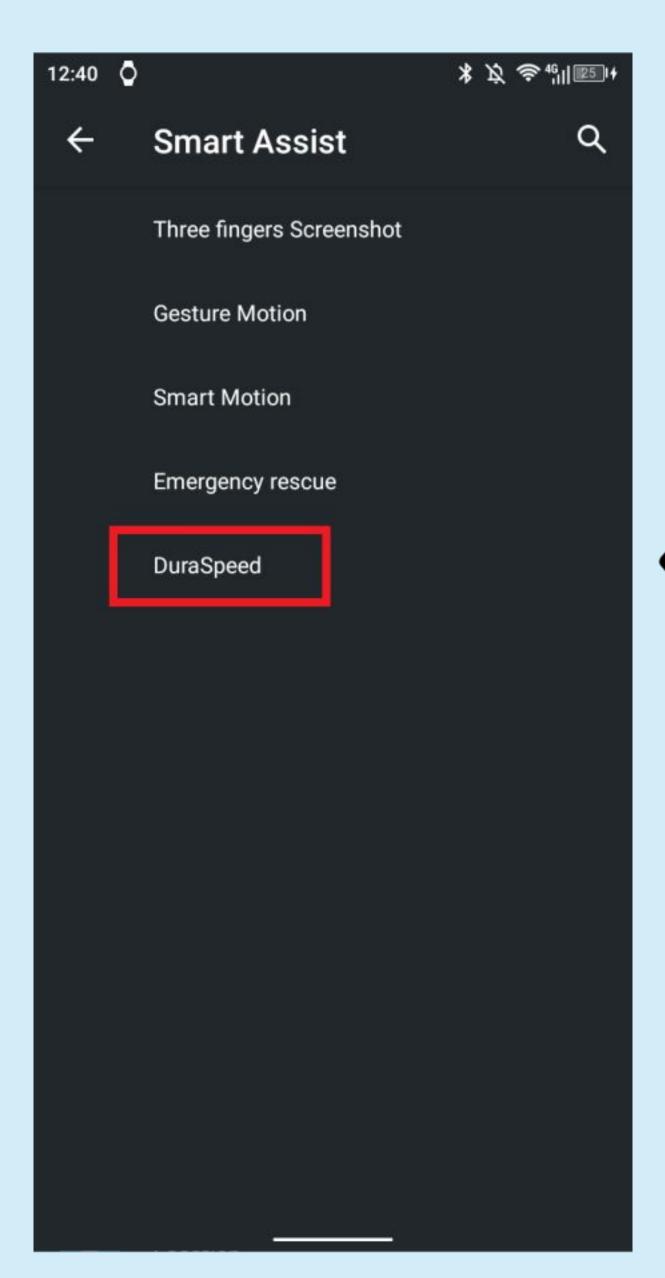



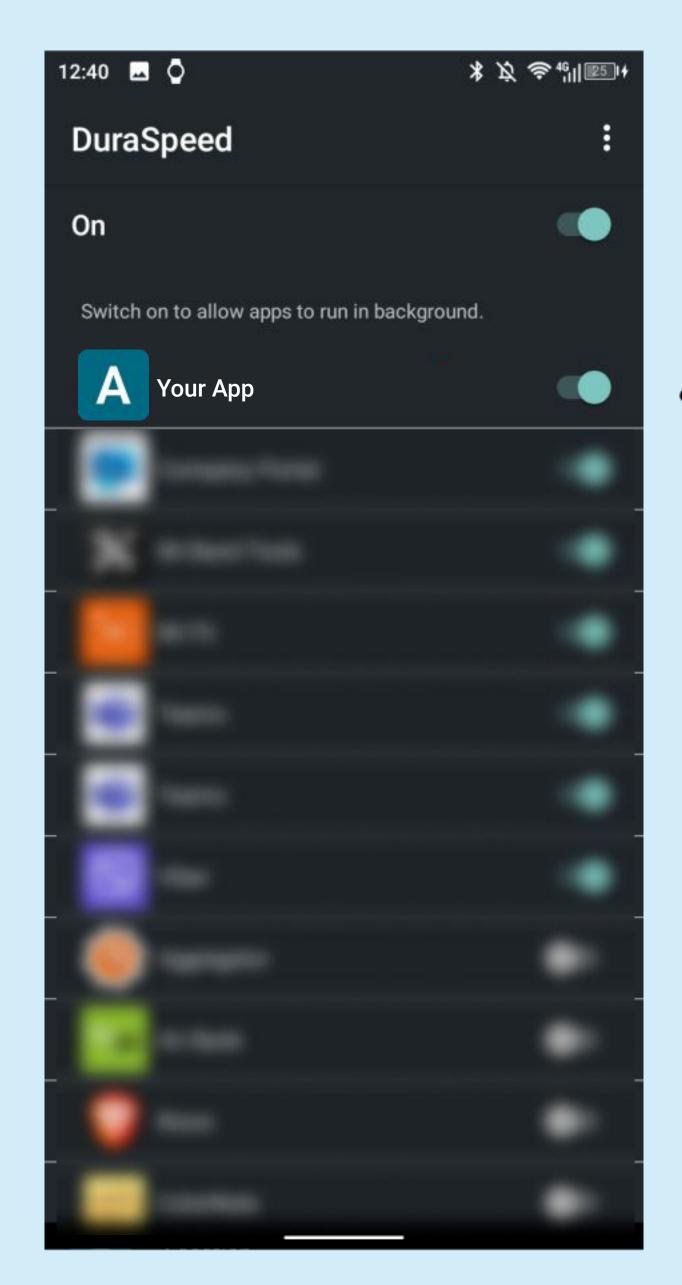



# 12:41 \* ☆ ♣¶ 100 H Q Search apps WORK **PERSONAL**

## STEP n°12

Run application Basic Service

# 12:41 💆 \* 皮 参 幅 100 ↔ **(**) Basic Service Optimize used 3.12G | 6.00G used 17.0G | 128.0G ROM RAM Cache Cleaner Boost speed Power Manager Traffic Monitor App Manager



# 12:41 🚨 💆 \* 点 参 46川 1823 → **(**) App Manager 13% / 22% 17.0GB/128.0GB 7.3GB/32.1GB ☐ SD card ☐ Phone storage App auto start Uninstall the app App freeze Default application settings




# 12:41 💆 常度参鳴■ Auto-start app 8 application has been allowed to auto-start Your App



# 12:41 💍 ≯ 友 参鳴⊪ **Basic Service** Optimize used 3.12G | 6.00G used 17.0G | 128.0G ROM RAM Cache Cleaner Boost speed Power Manager Traffic Monitor App Manager



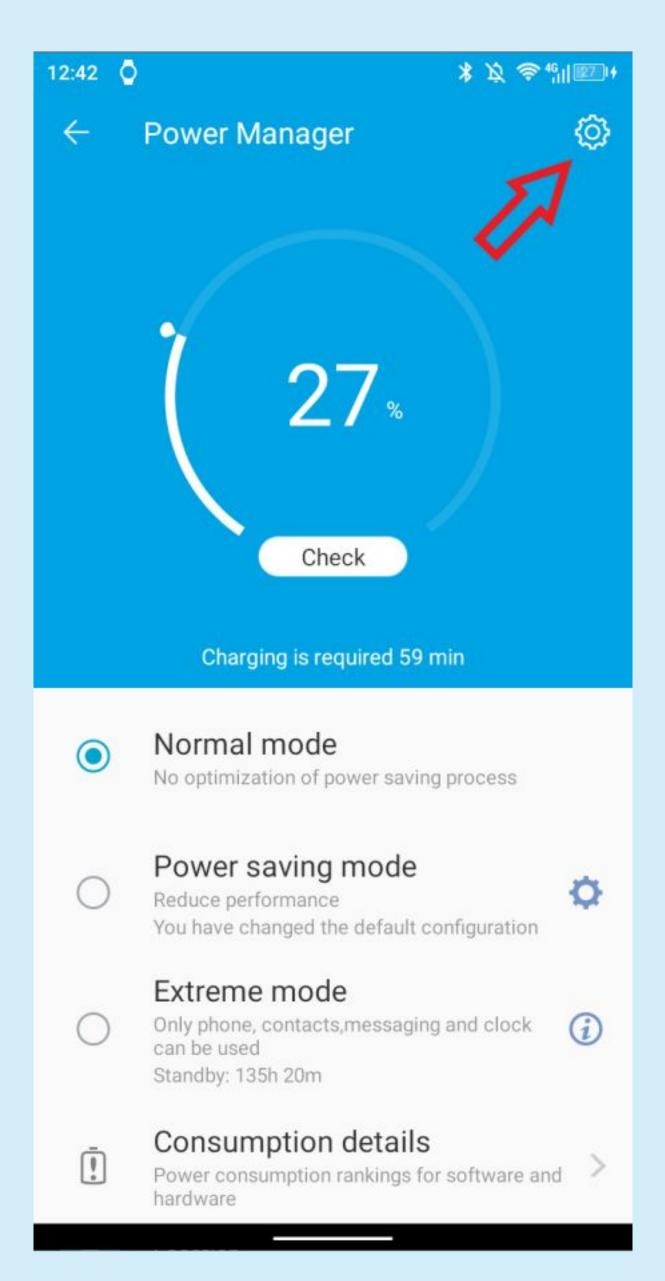



# Select Settings

