


SETTINGS

REALME


REALME UI 4.0

STEP n°1

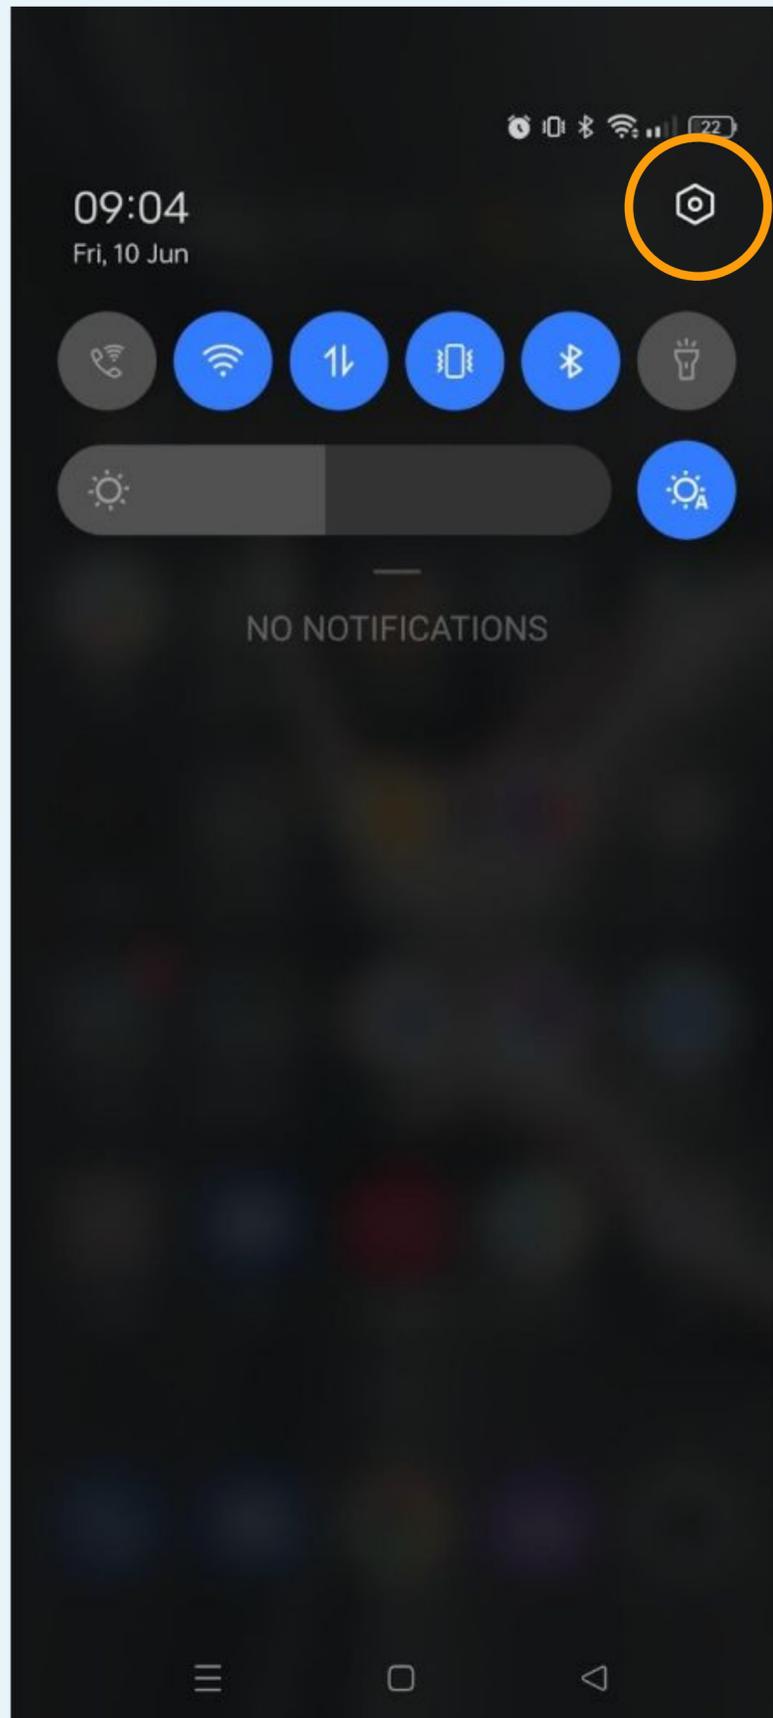

Click on the gear icon to access to the
Parameters

STEP n°2

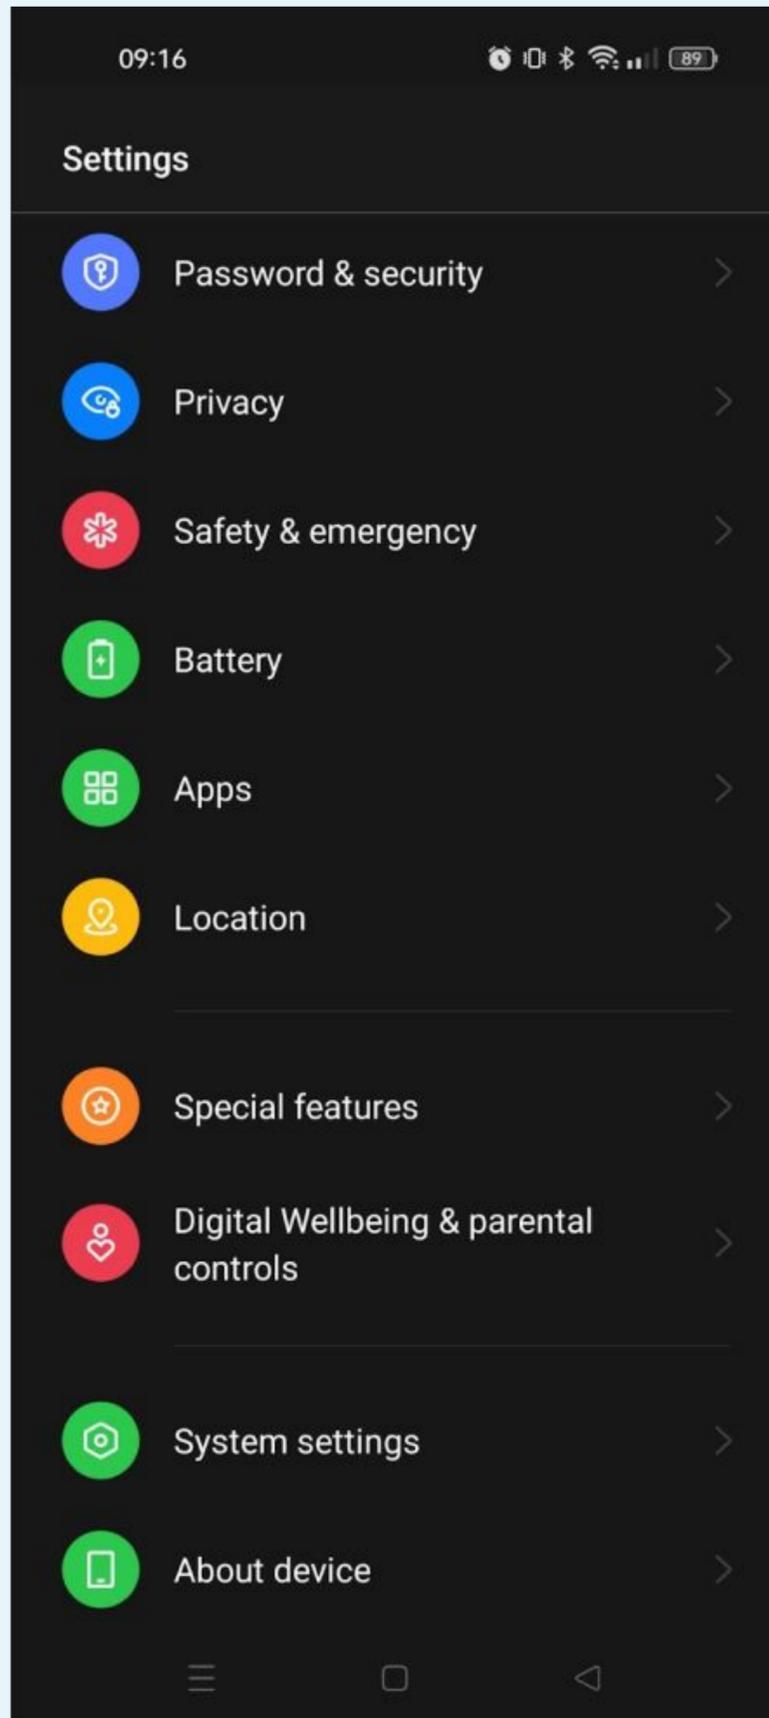


← Select **Apps** in the phone settings


STEP n°3



Select **App management**

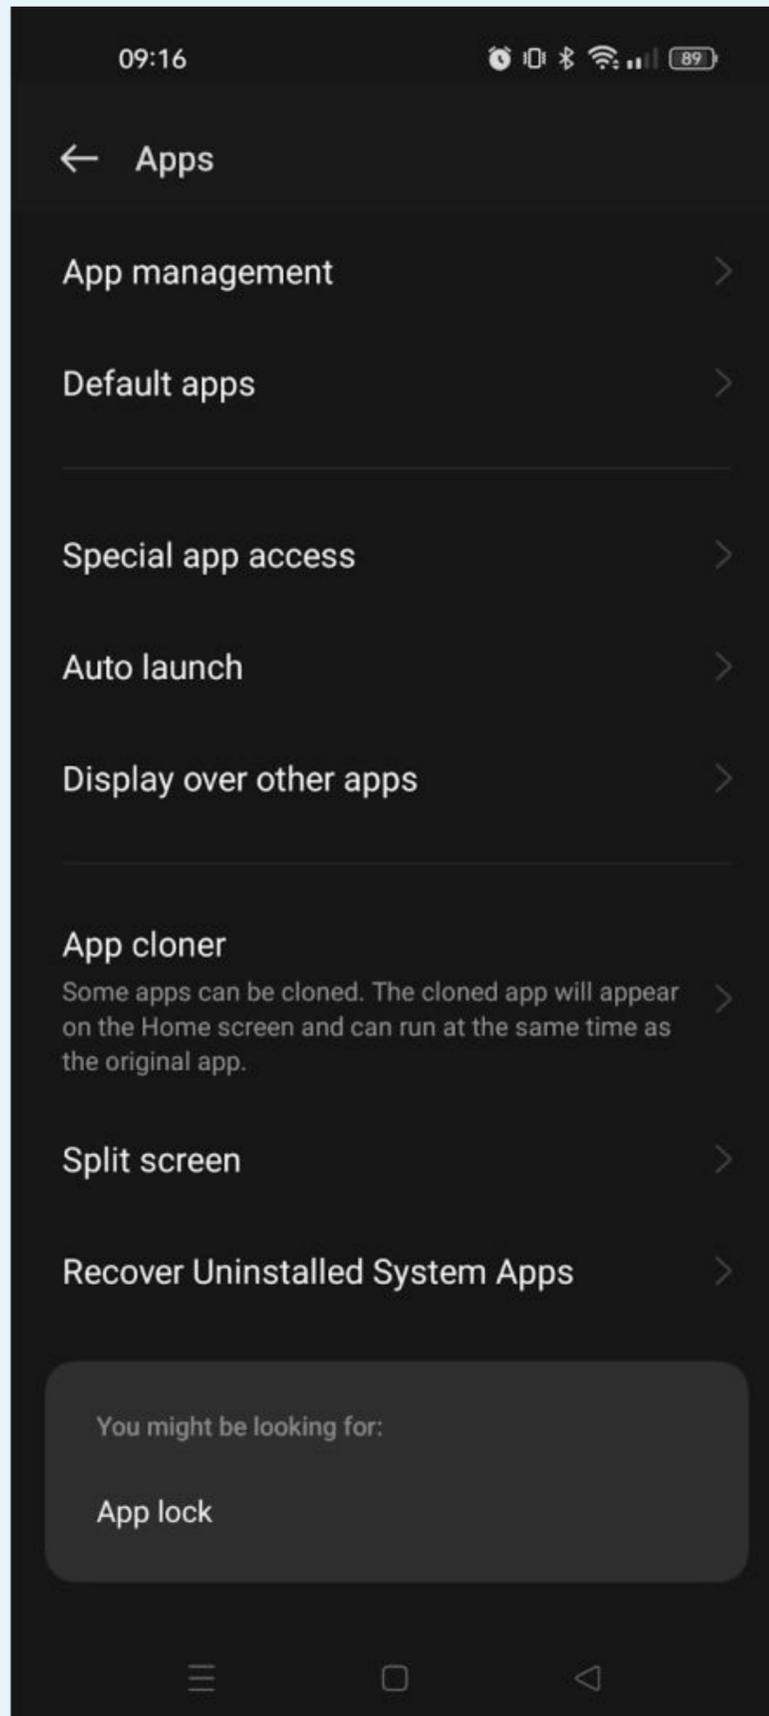


STEP n°4

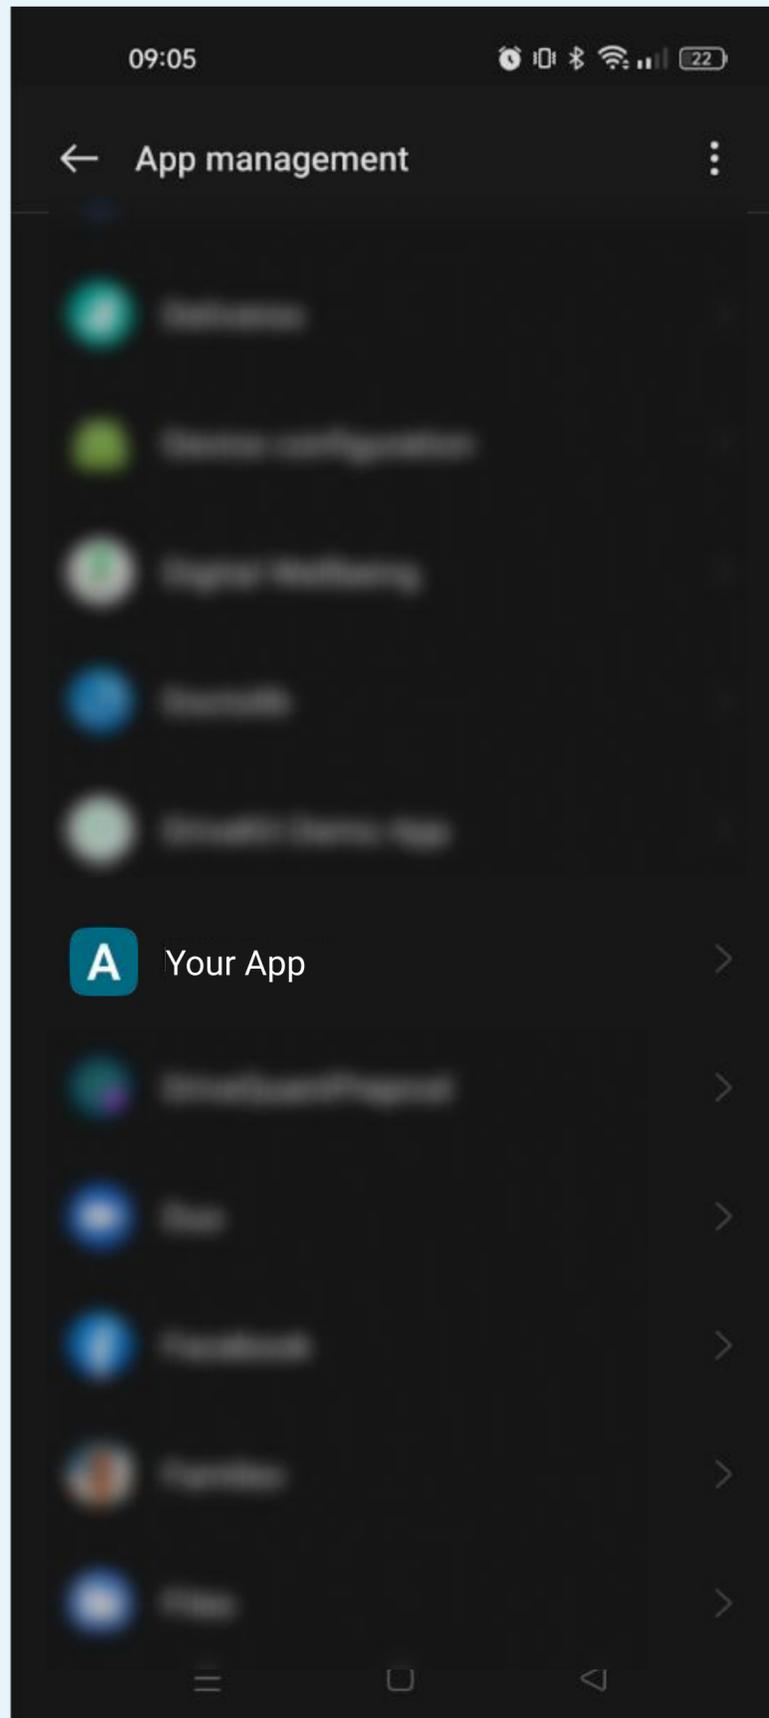


← Search and select the **Your App** application in the list of applications

STEP n°5

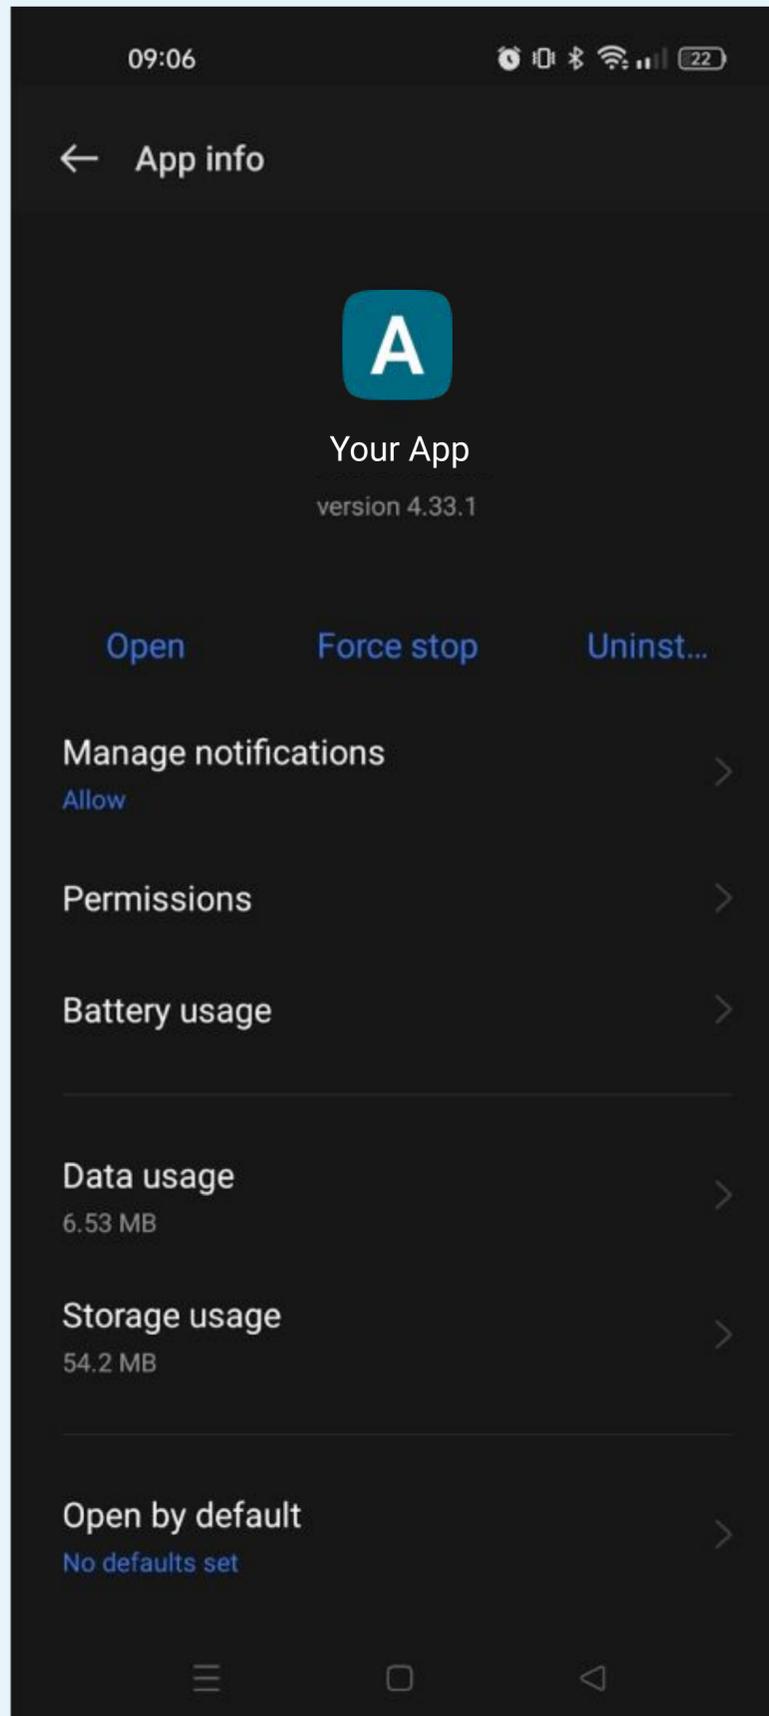

← Click on **Battery usage** on the application detail screen

STEP n°6

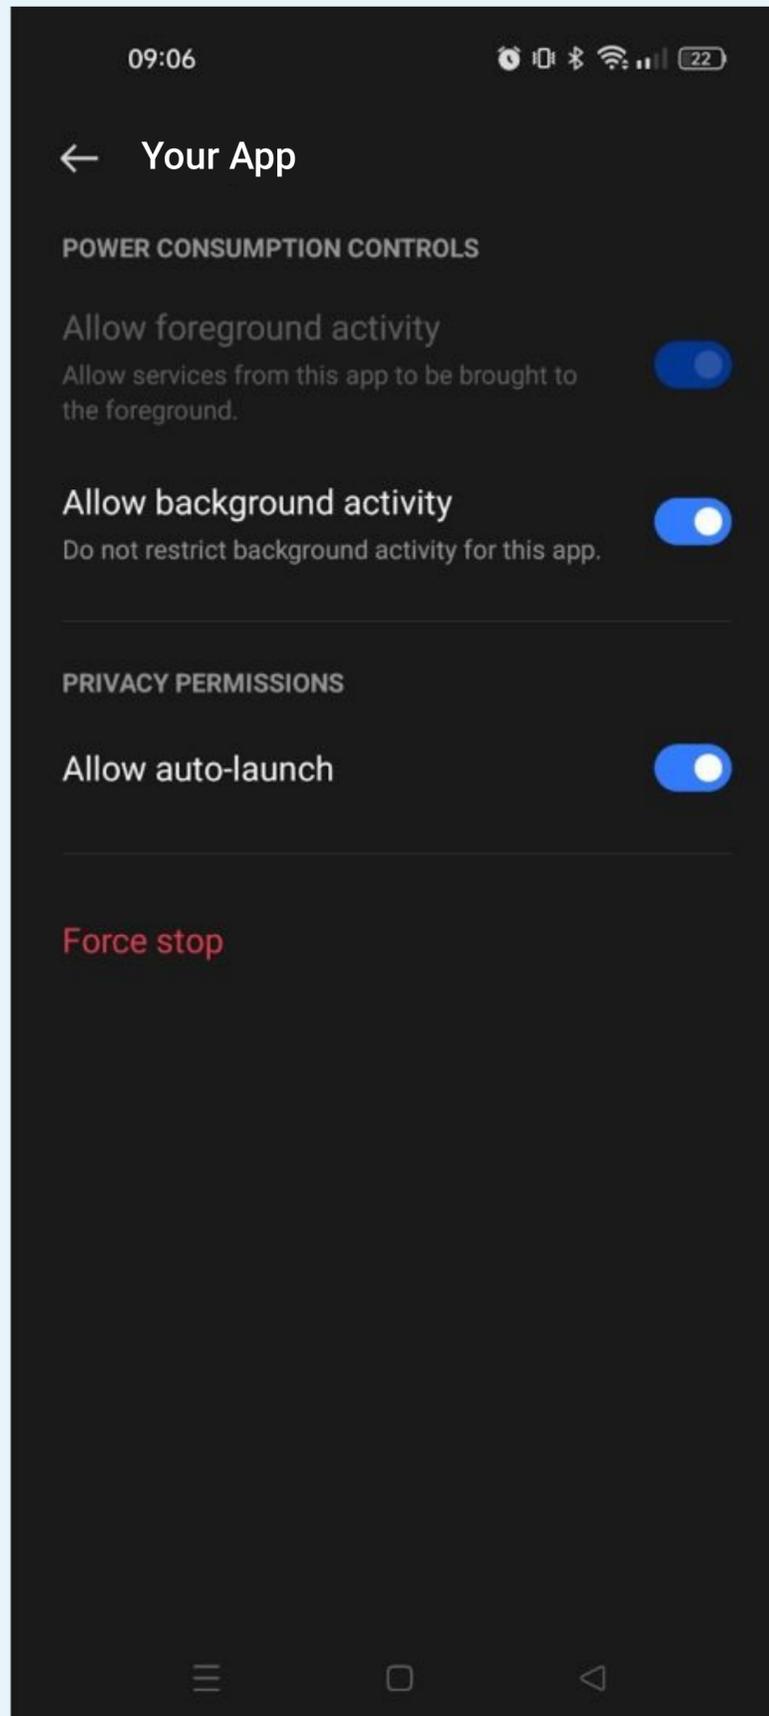

Check that **Allow background activity** and **Allow auto-launch** are enabled