


How to disable the battery saver?


VIVO

FunTouch 13

STEP n°1

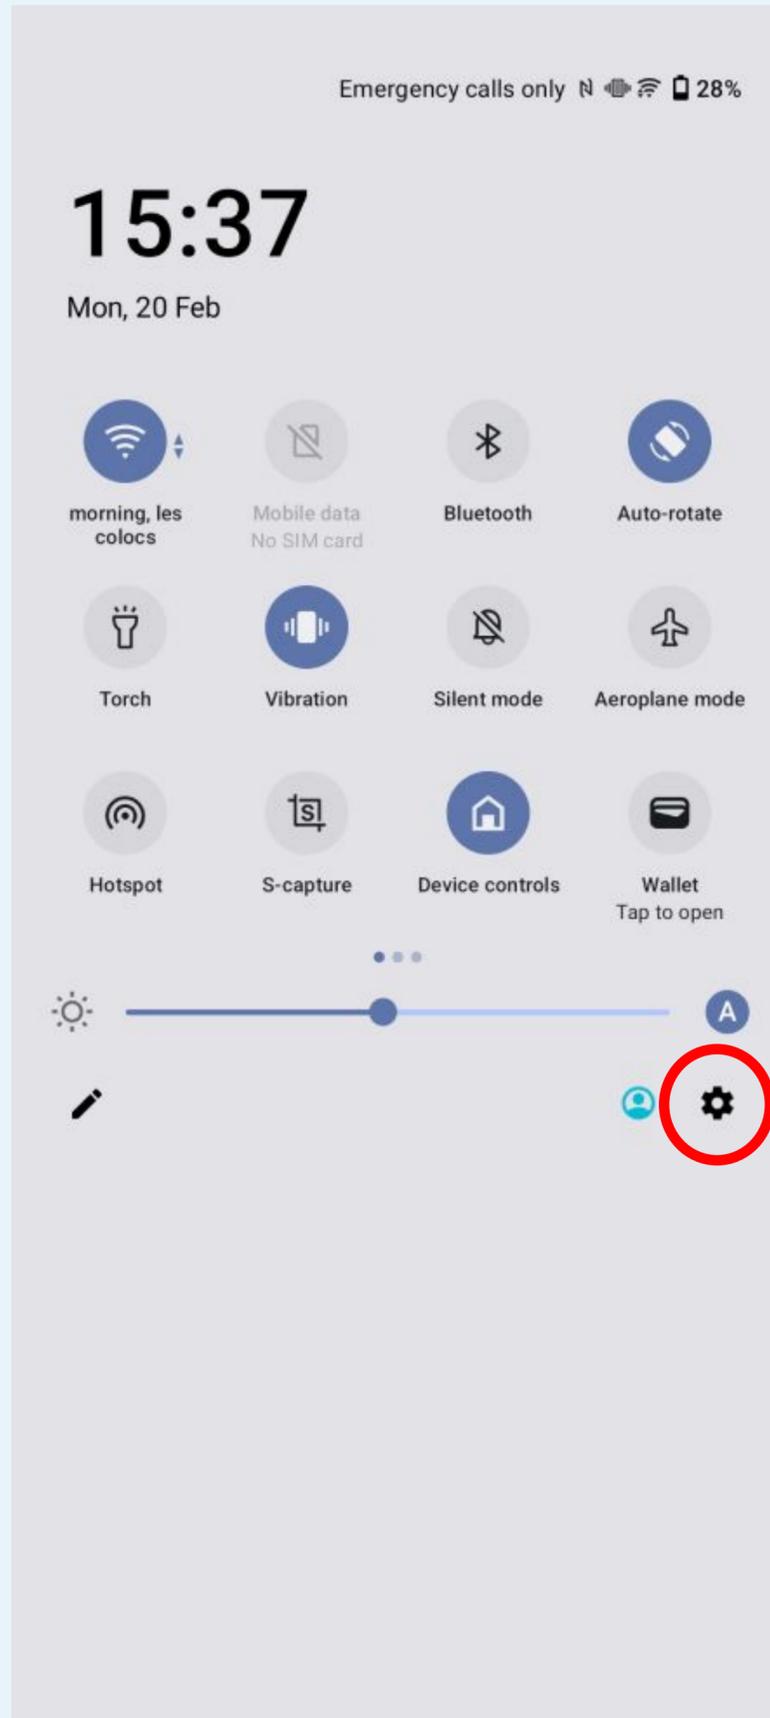


Click on the gear icon to access to the
Parameters

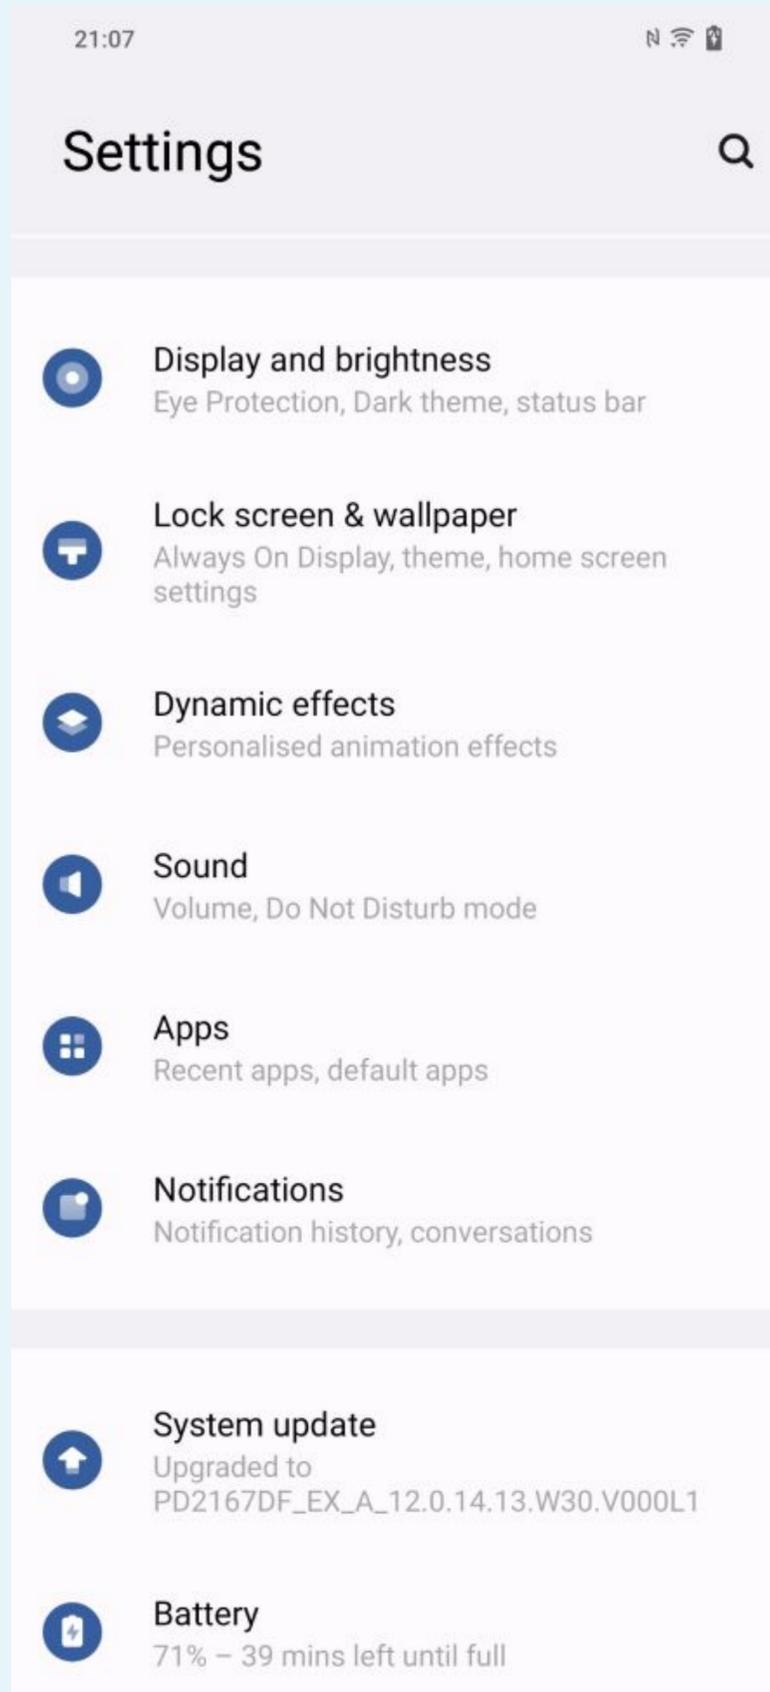

STEP n°2




Select **Apps**

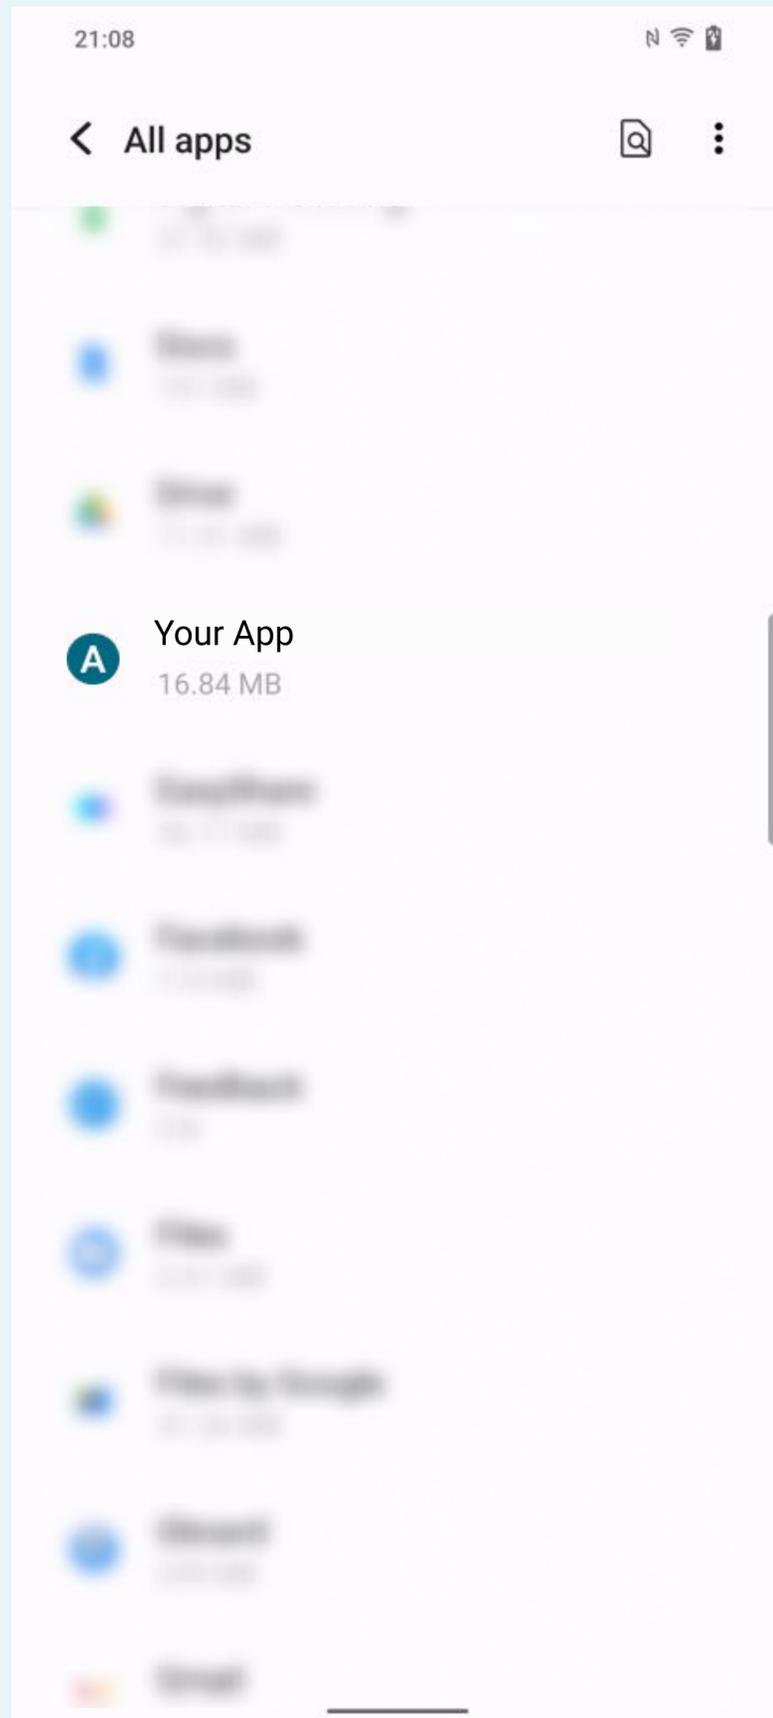

STEP n°3


Search and select the **Your App** app in the list

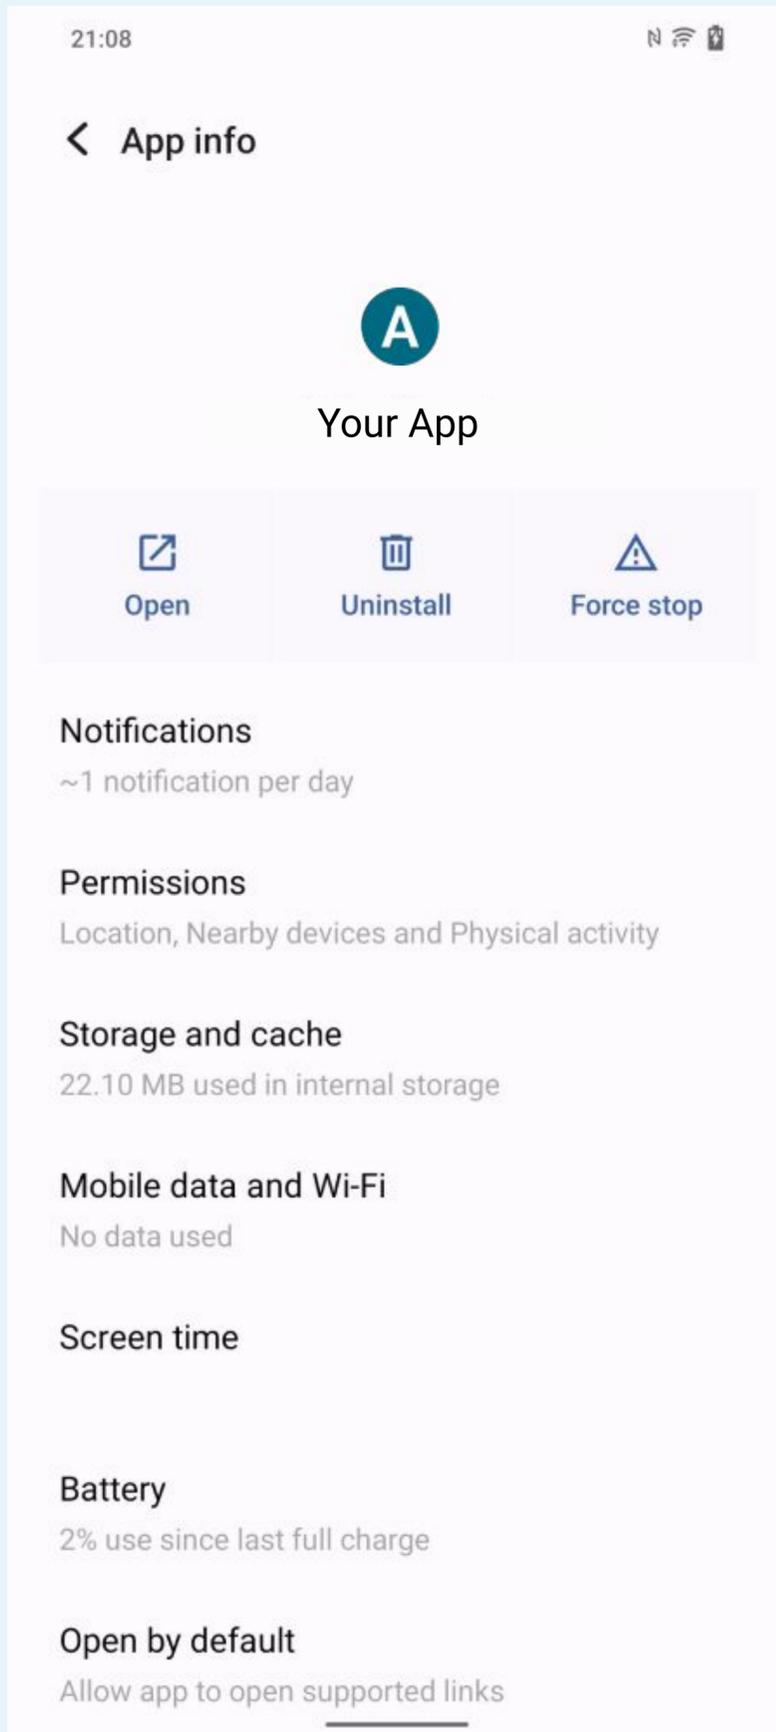

STEP n°4




Click on **Battery**

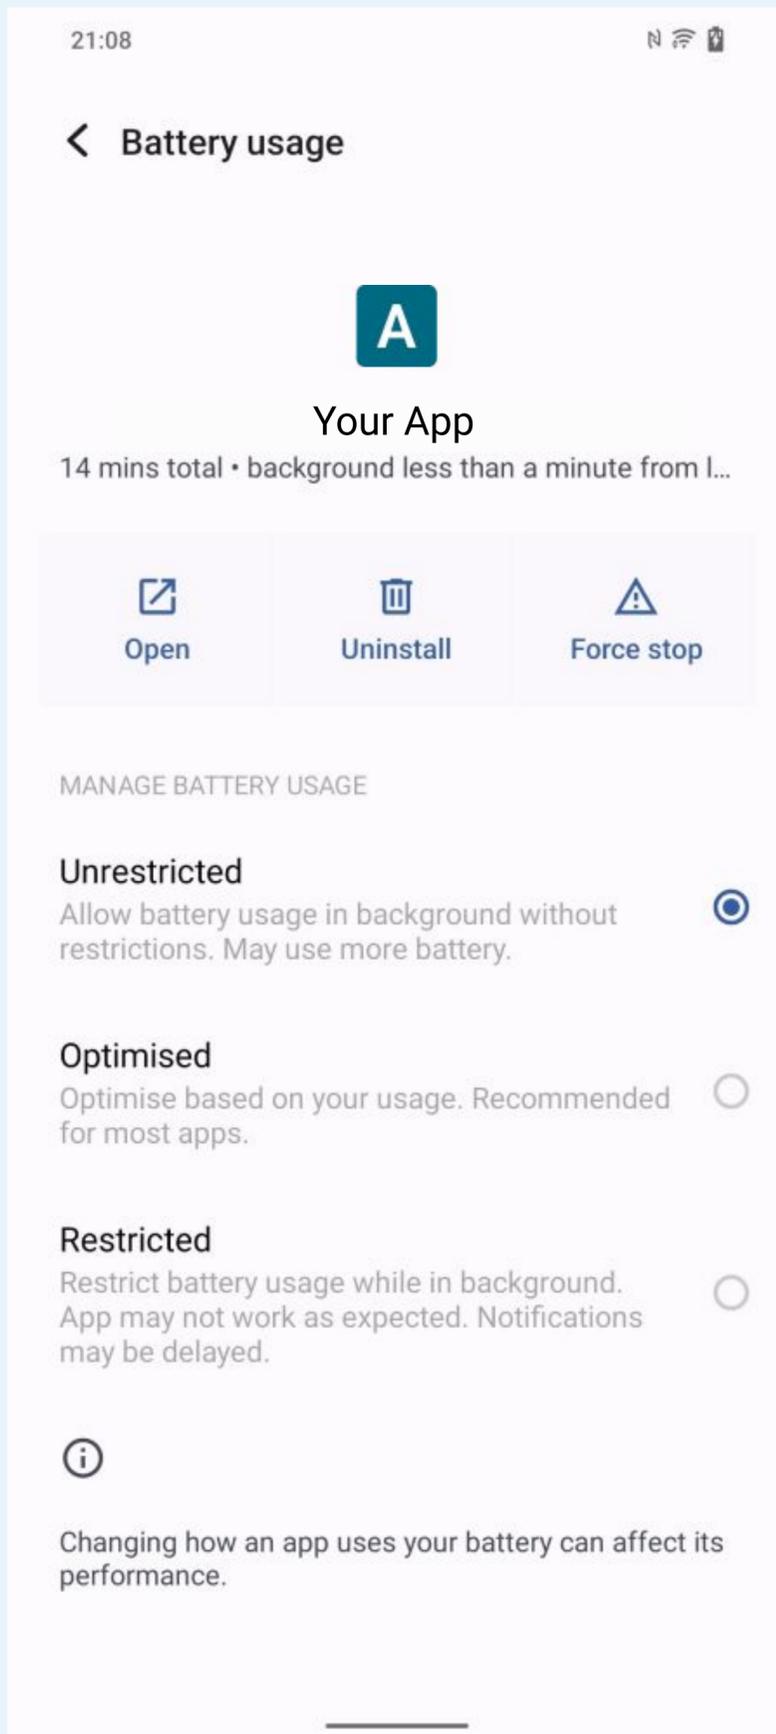

STEP n°5




Select **Unrestricted**

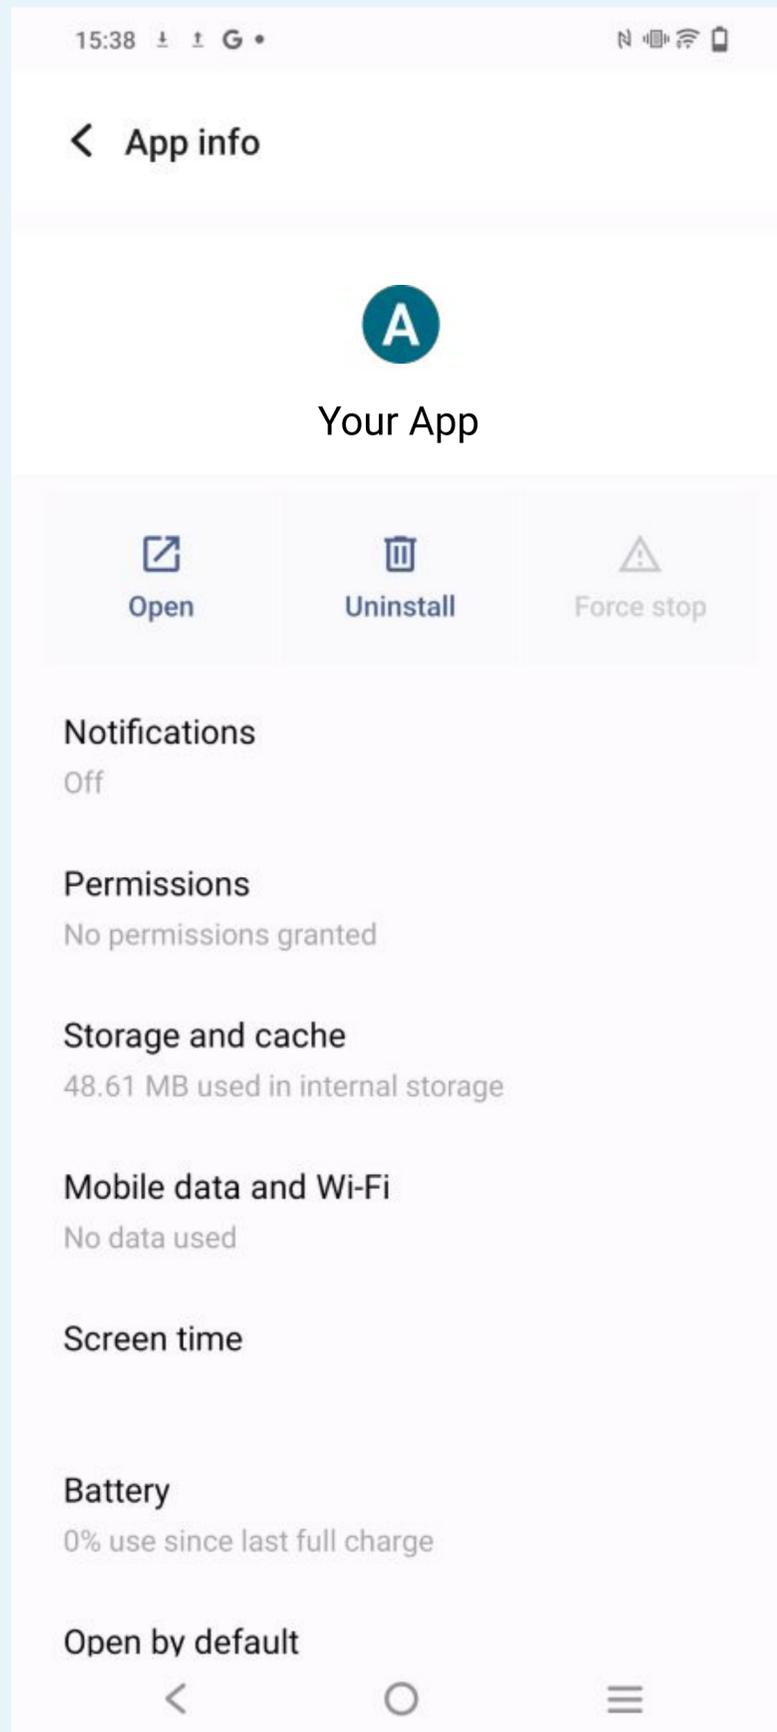

STEP n°6





Go back to the App info and select
Mobile data and Wi-Fi

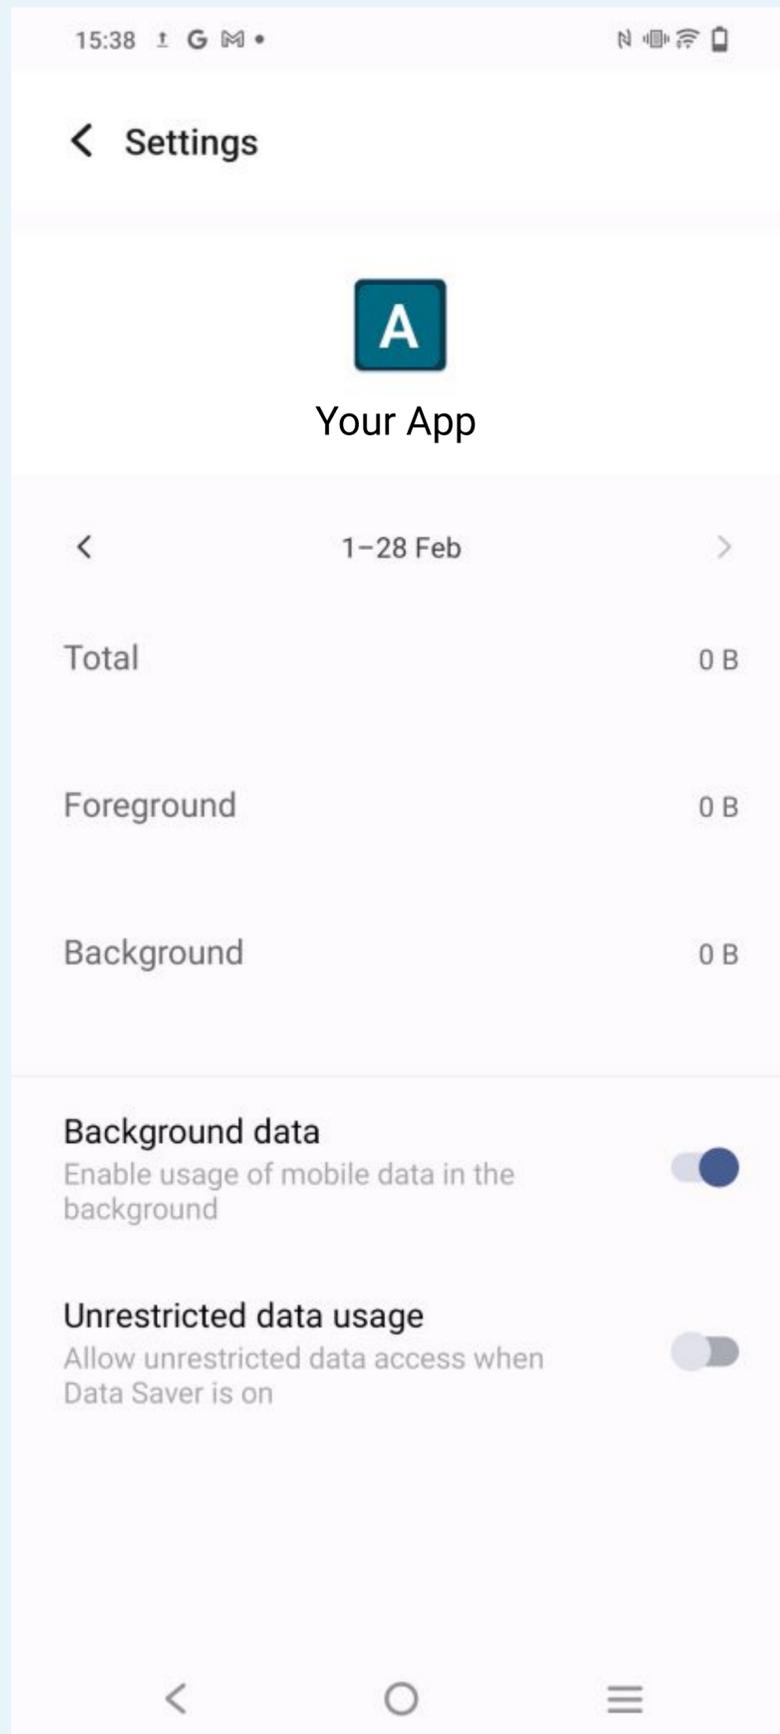

STEP n°7




Activate **Background data**

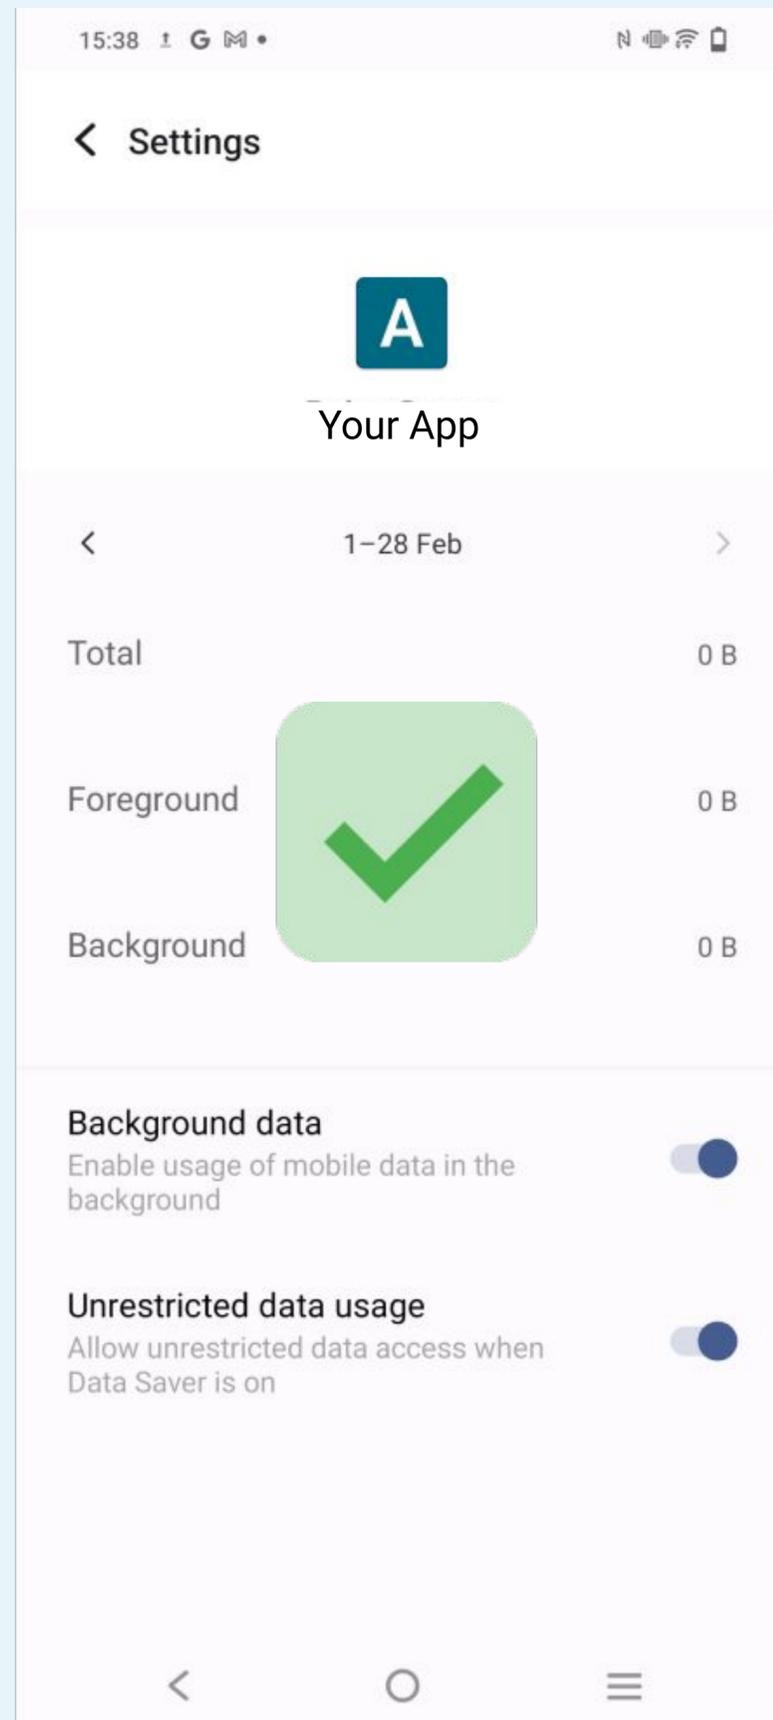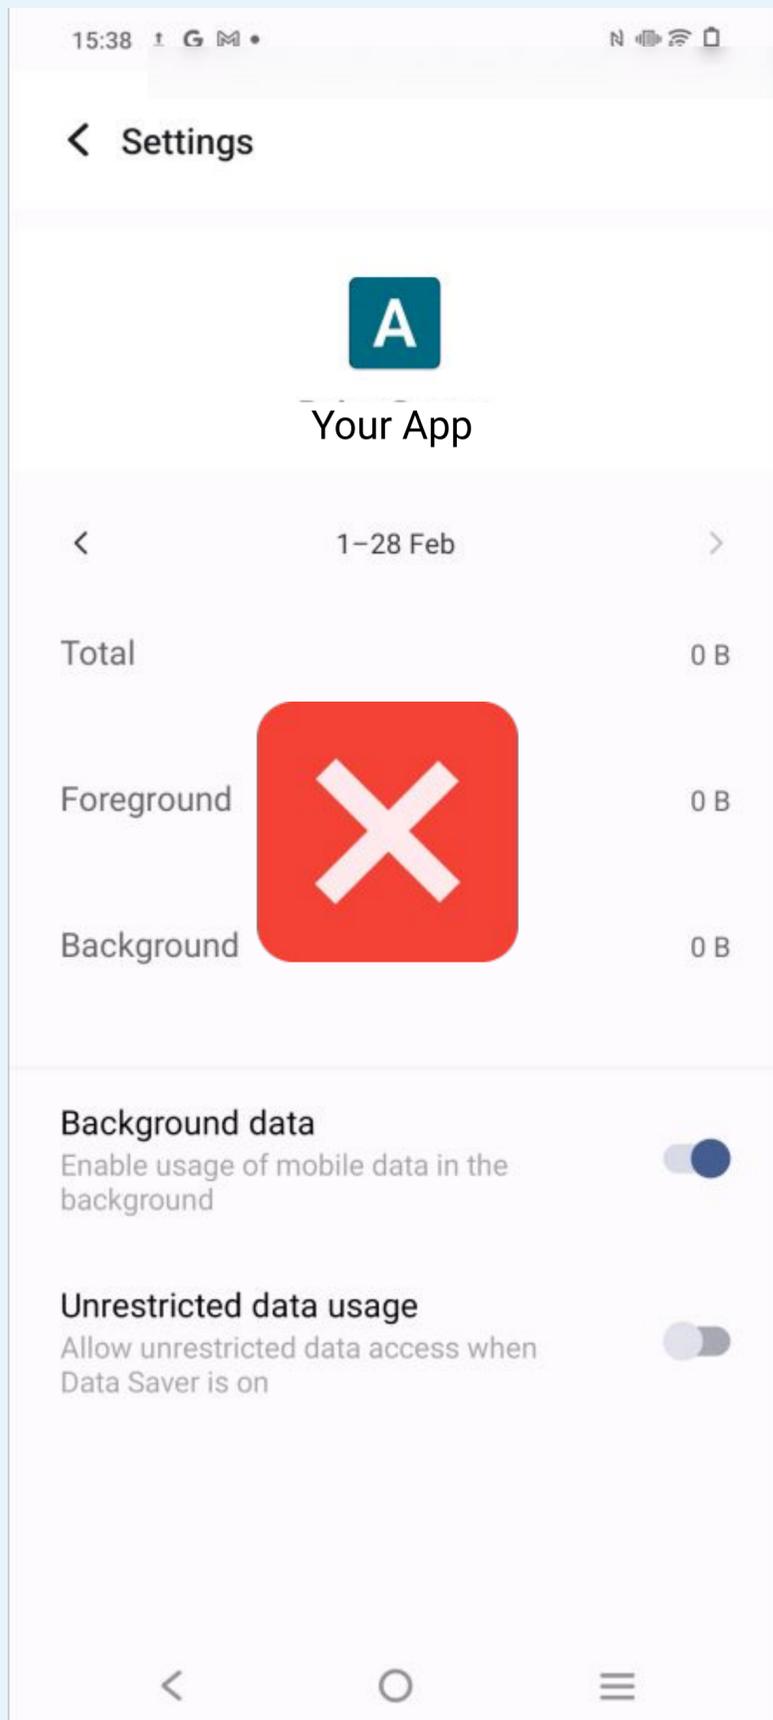

STEP n°8


← Activate **Unrestricted data usage**

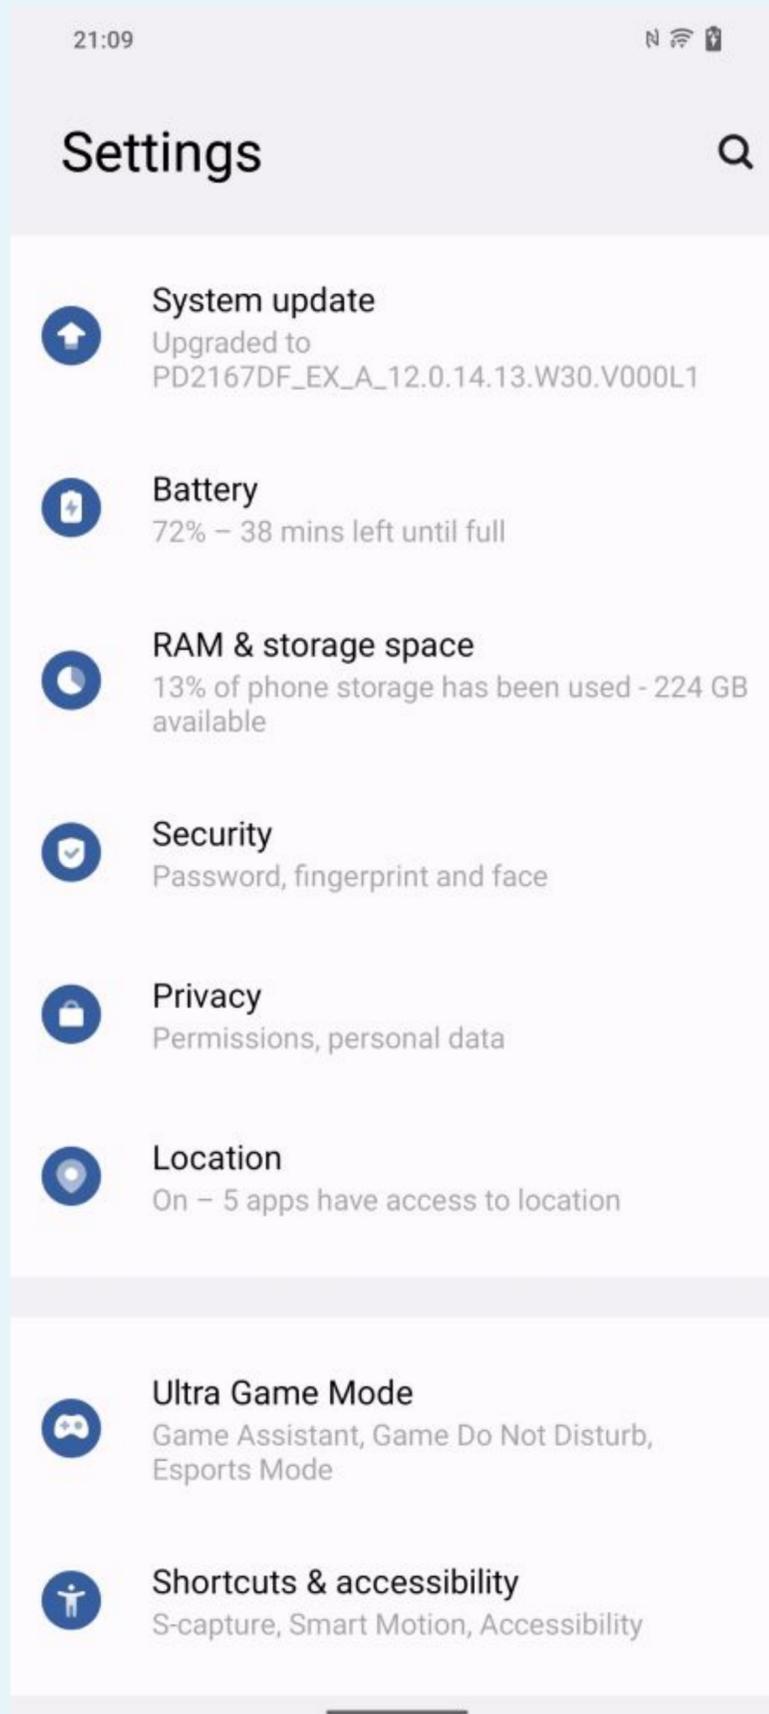

STEP n°9





Go back to the phone parameters and click on **Battery**

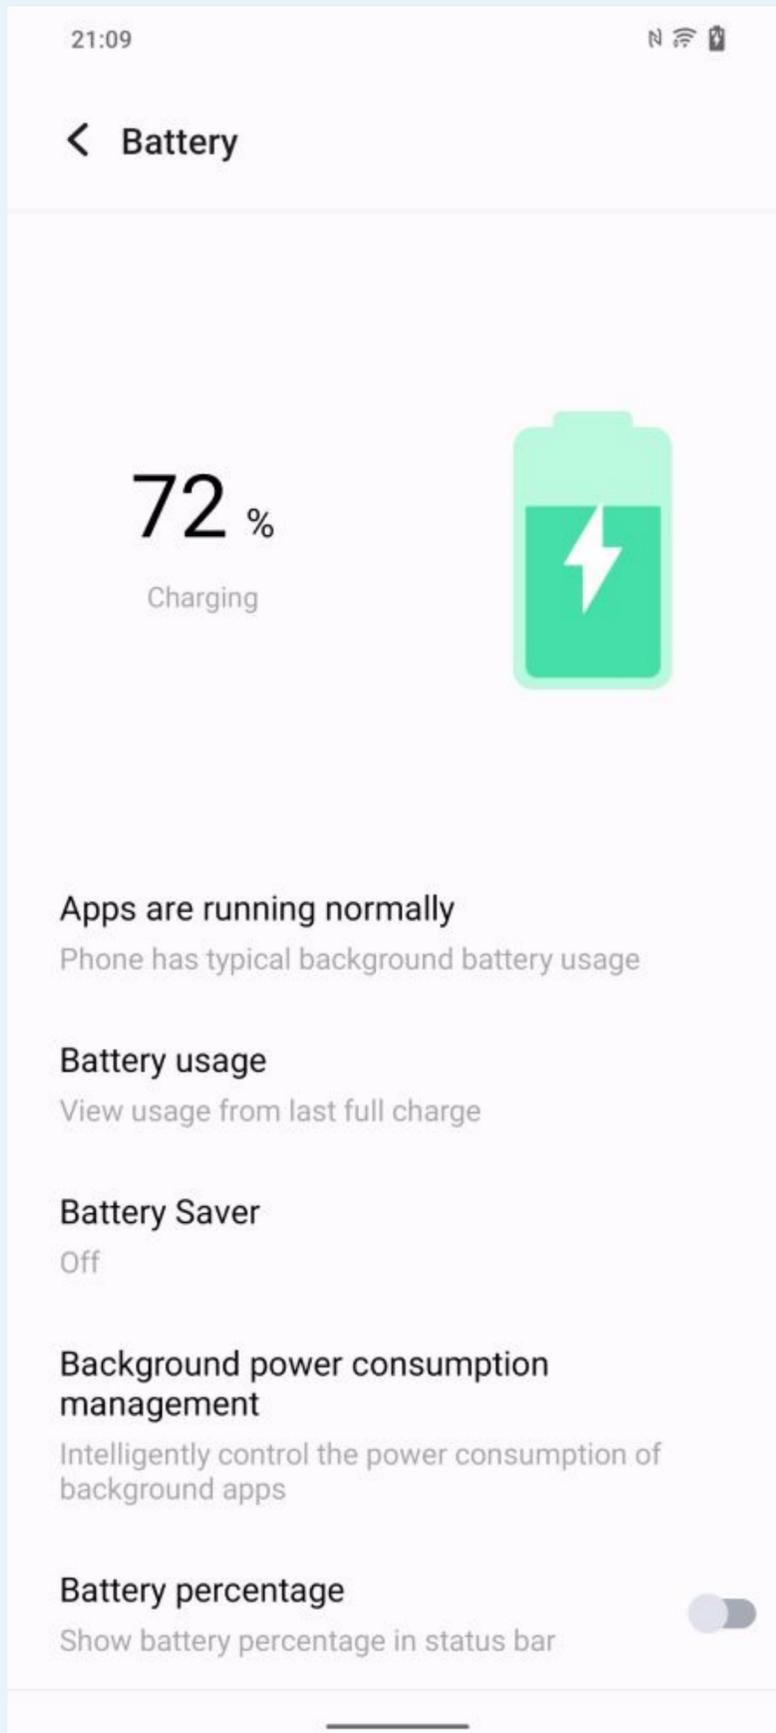


STEP n°10

← Select **Battery Saver**

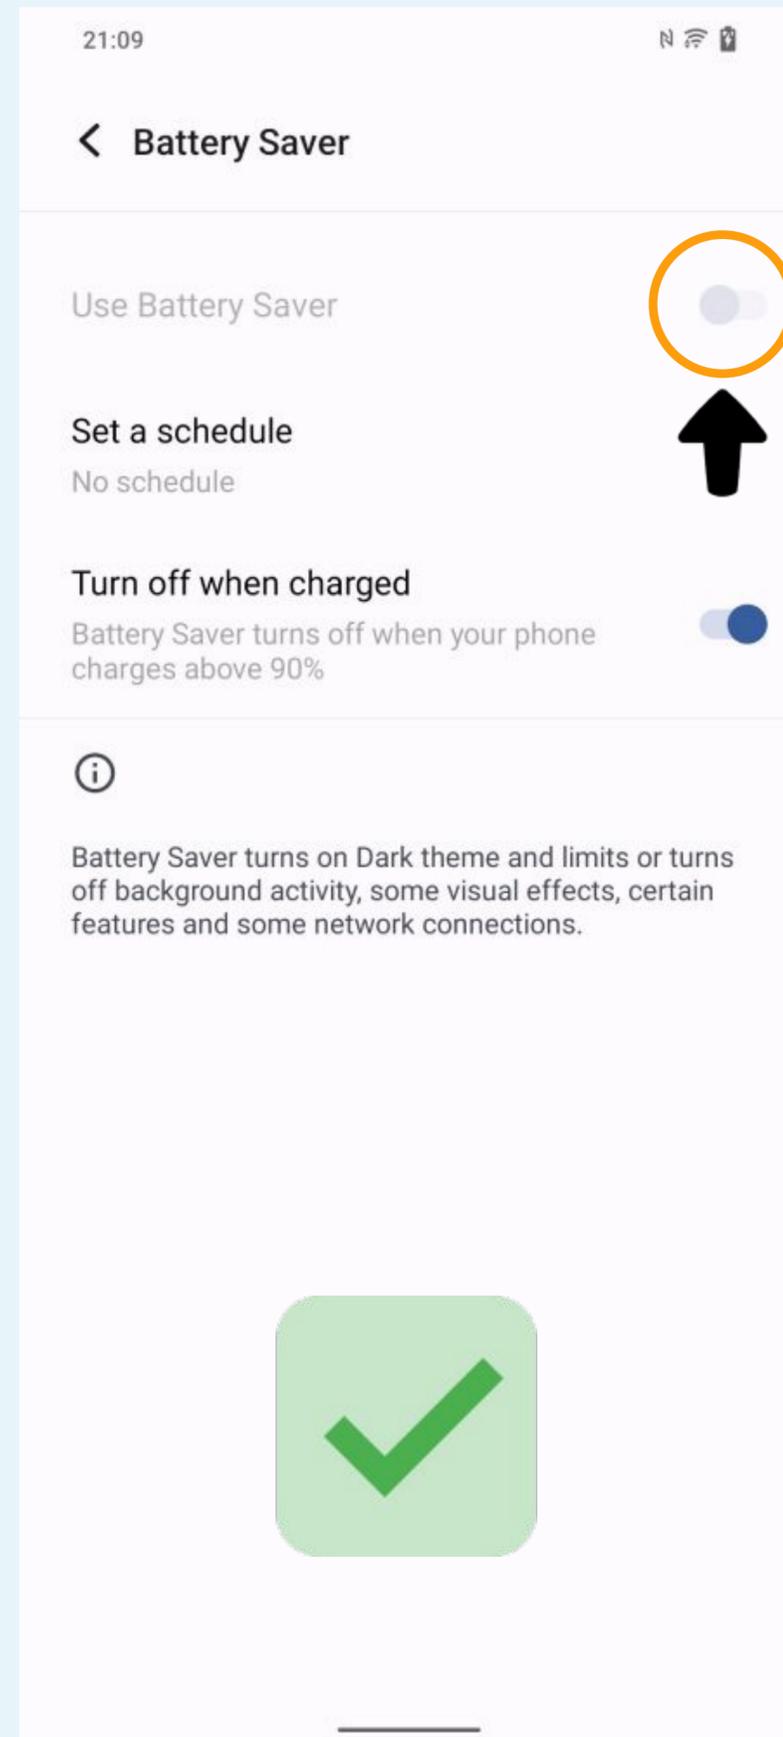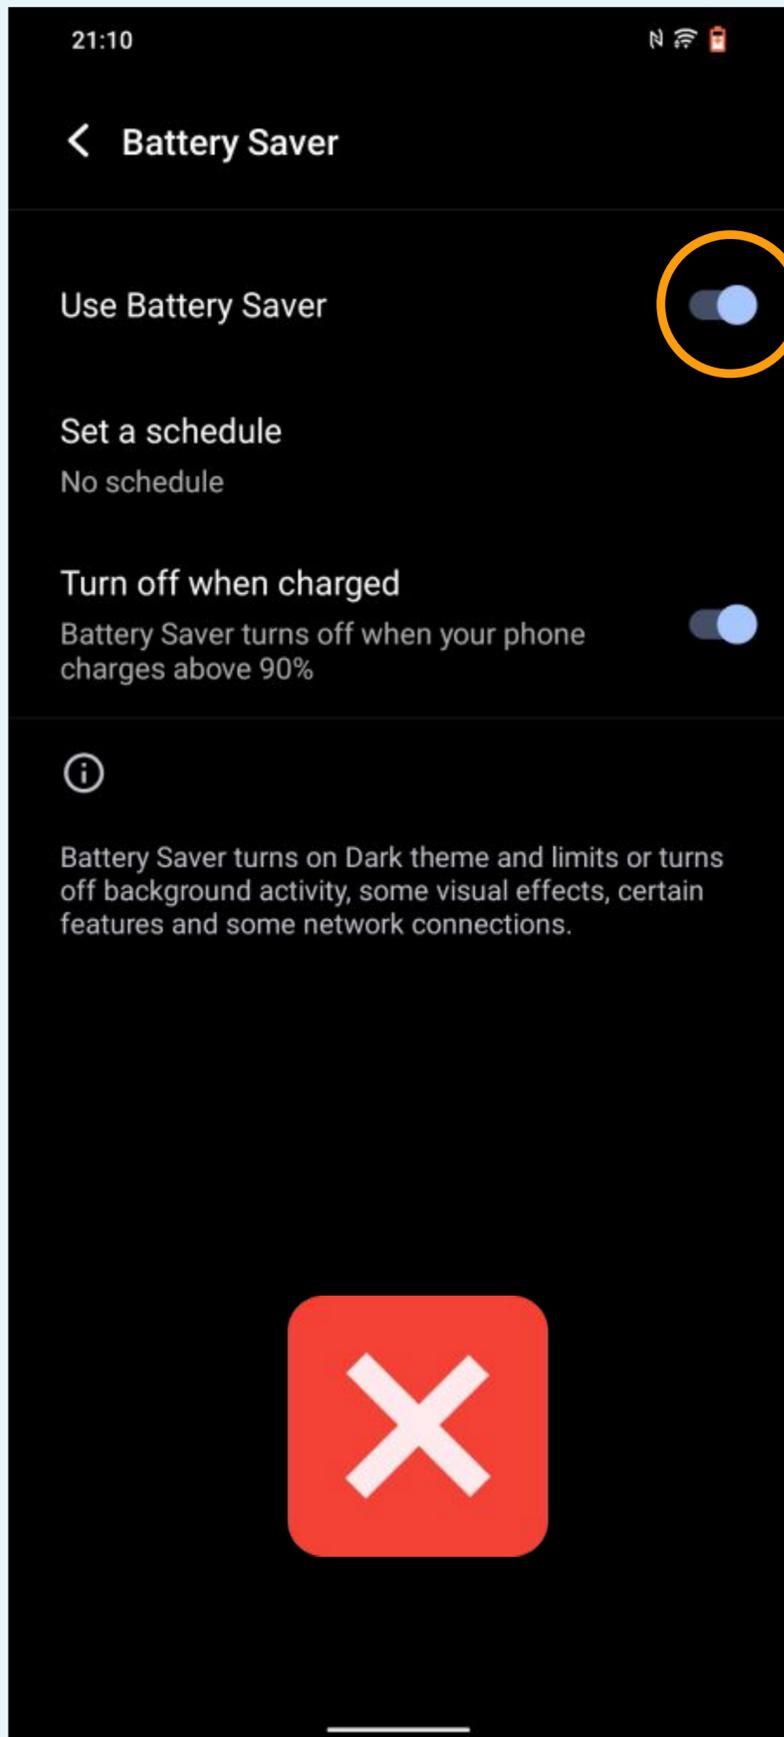


STEP n°11

Disable the
Use Battery Saver

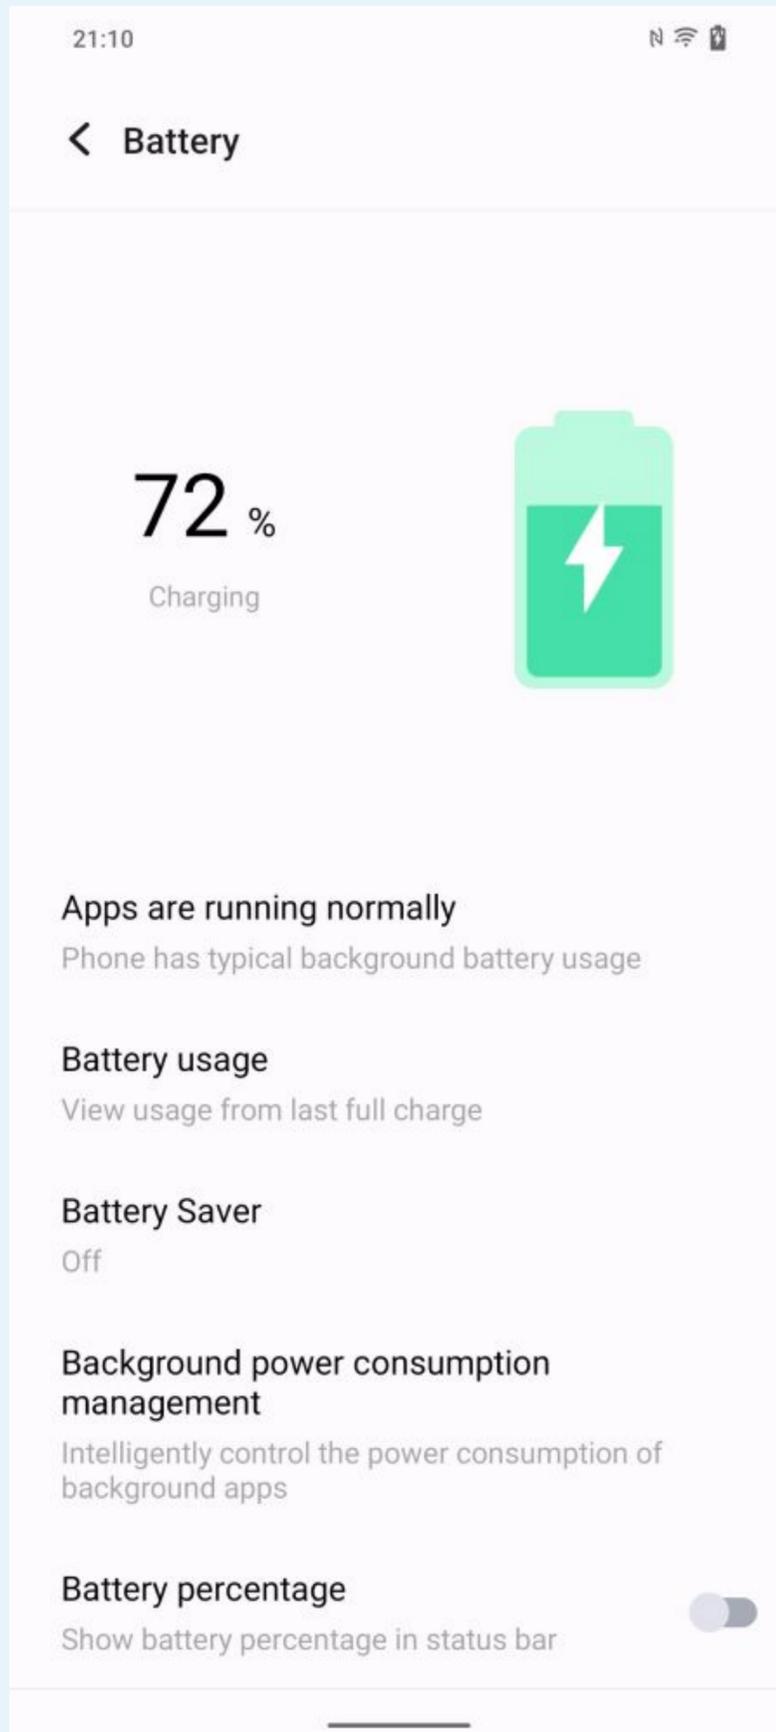

STEP n°12



← Select **Battery power consumption management**

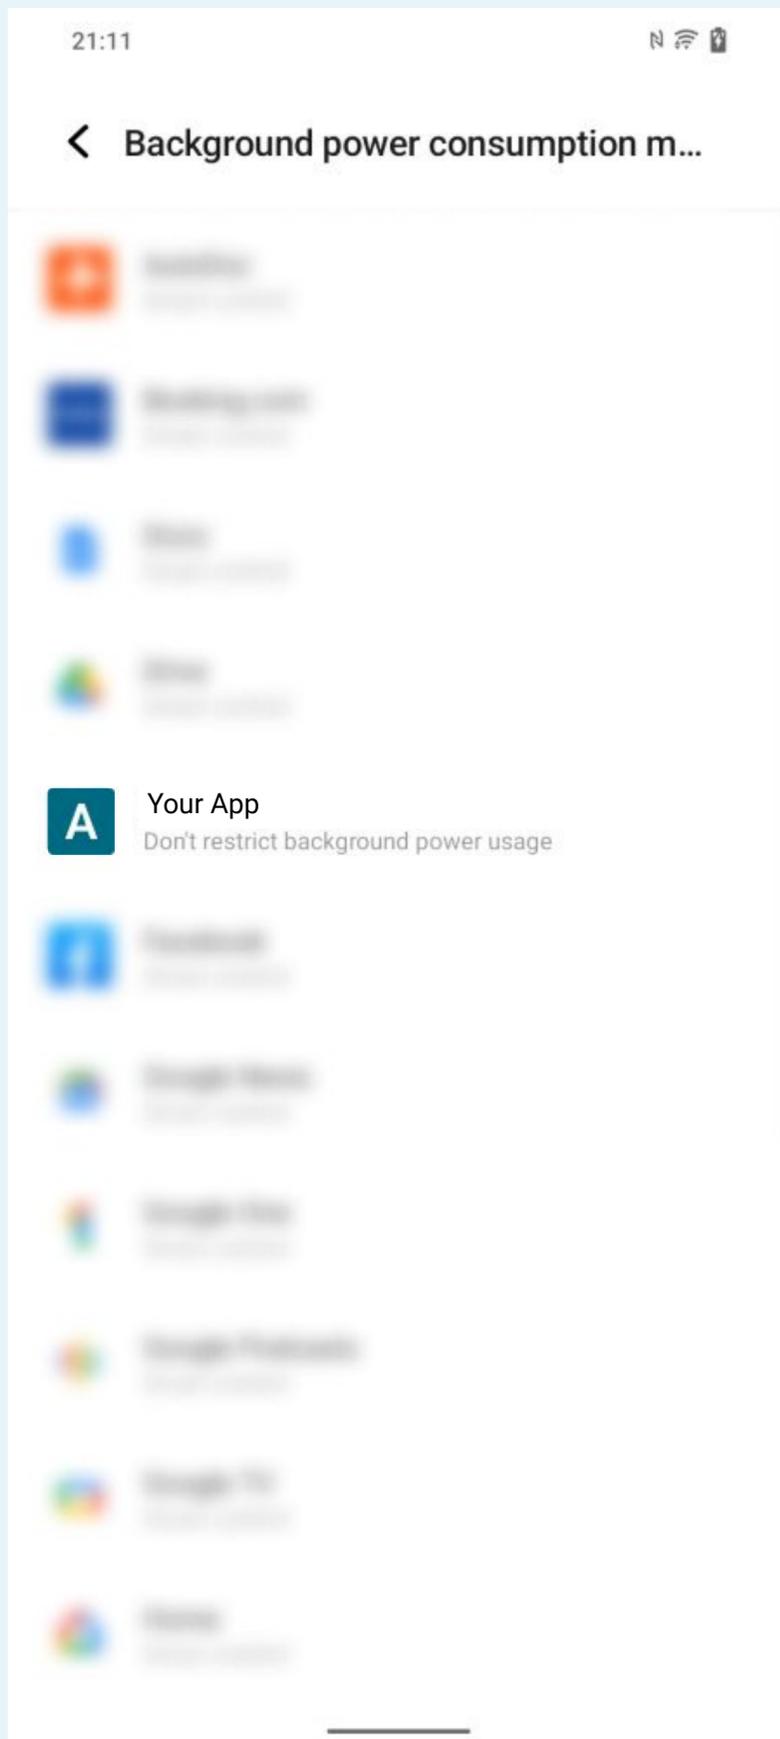

STEP n°13



Search and select the **Your App** app in the list

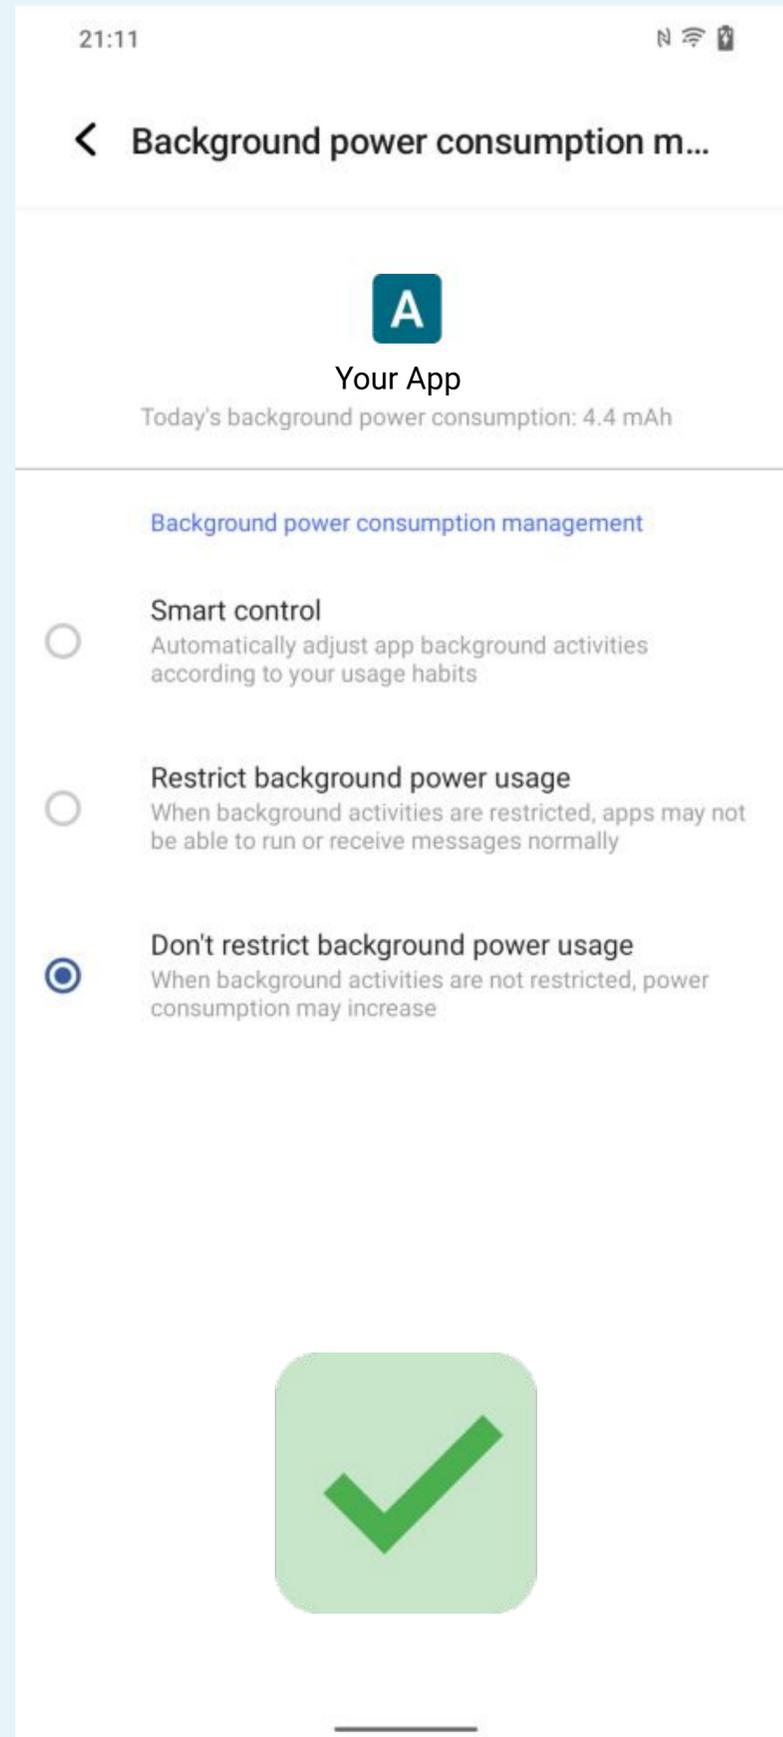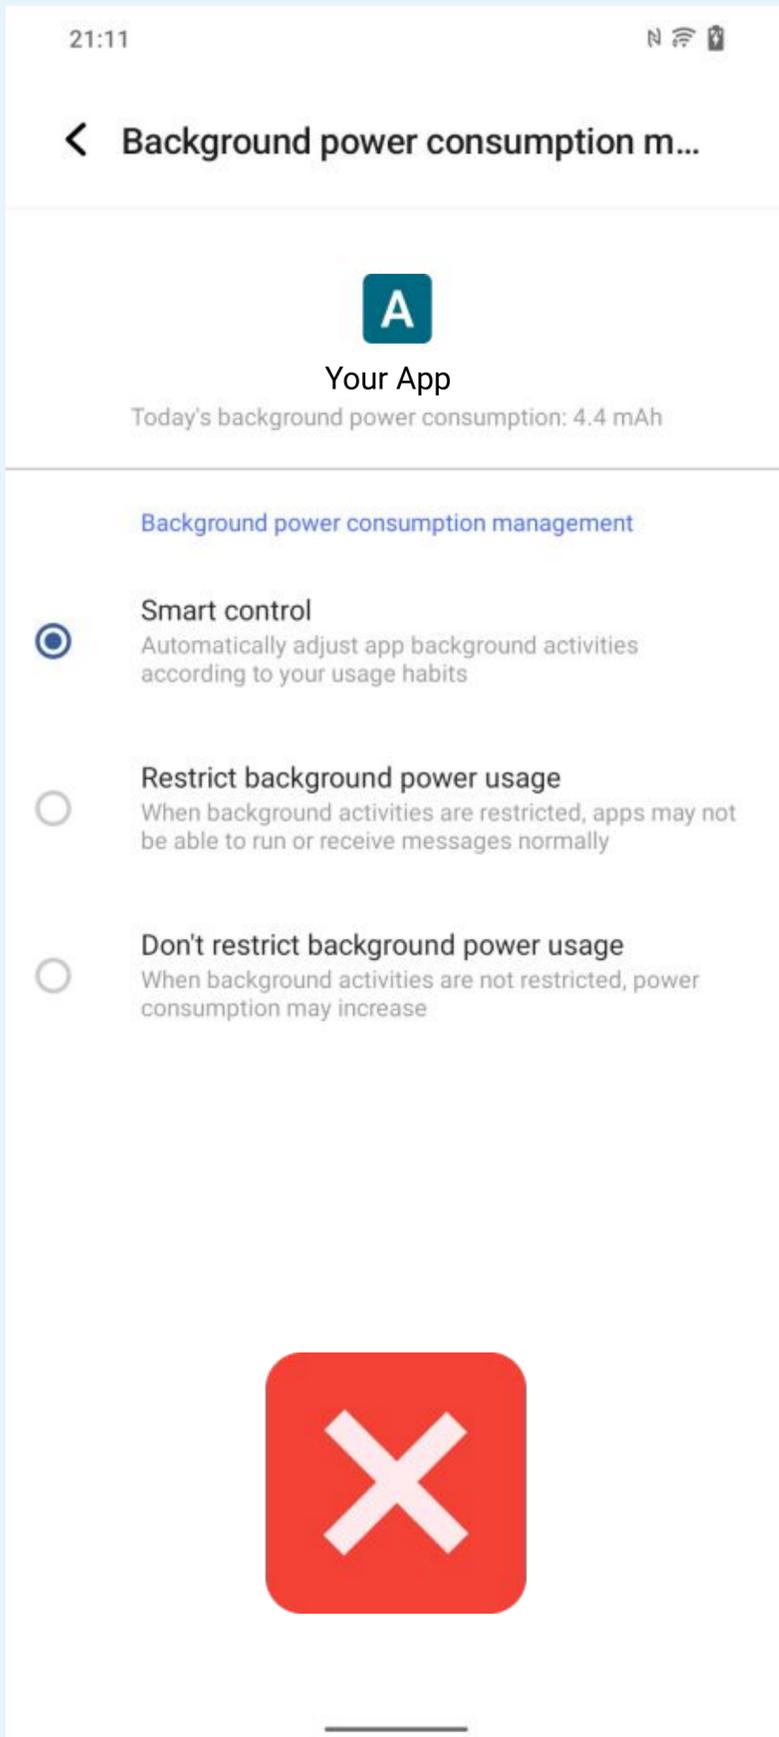

STEP n°14

Select **Don't restrict background power usage**